


5. Front Inner Remote

A: REMOVAL

- 1) Remove the door trim. <Ref. to EI-43, REMOV-AL, Door Trim.>
- 2) Remove the cable from the cable holder.
- 3) Remove the screws, and remove the inner remote handle.

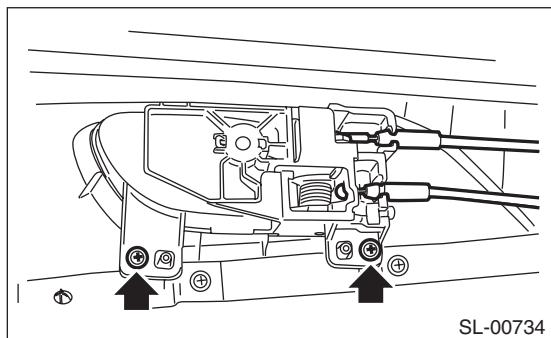

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Check the cable of the door opener and door lock for deformation. When it is deformed, straighten it because failure operations may occur. When it is unrepairable, replace the front door latch and door lock actuator assembly.
- 2) Check the lever, rod and wire for smooth operation.