

8. Rear Inner Remote

A: REMOVAL

Refer to "Front Inner Remote" for the removal procedure. <Ref. to SL-31, REMOVAL, Front Inner Remote.>

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Check the cable of the door opener and door lock for deformation. When it is deformed, straighten it because failure operations may occur. When it is unrepairable, replace the rear door latch and door lock actuator assembly.
- 2) Check the lever, rod and wire for smooth operation.
- 3) Check the child safety lock for correct operations.