



9. Rear Outer Handle

A: REMOVAL


- 1) Raise the rear door glass to the top position.
- 2) Remove the rear door trim. <Ref. to EI-43, REMOVAL, Door Trim.>
- 3) Remove the sealing cover. <Ref. to EB-24, REMOVAL, Rear Sealing Cover.>
- 4) Remove the three screws, and move aside the rear door latch and door lock actuator assembly.

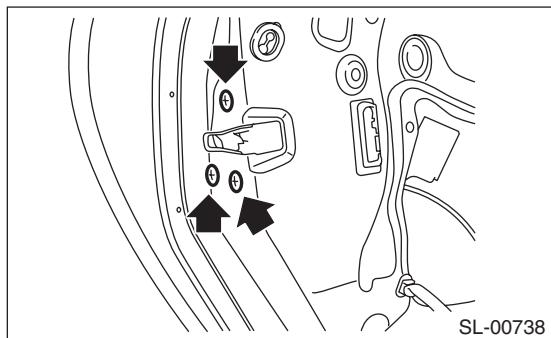

- 5) Remove the child protector cover, and loosen the TORX® bolt.

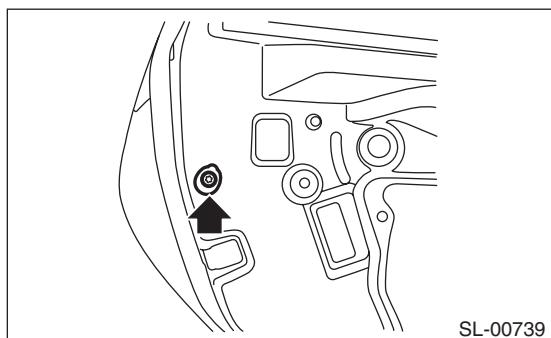

- 6) Remove the outer handle cover.
- 7) Move the rear outer handle towards the rear, and remove the rear outer handle.
- 8) Remove the outer spacer, and remove the frame assembly from the inner side.
- 9) Remove the TORX® bolt.

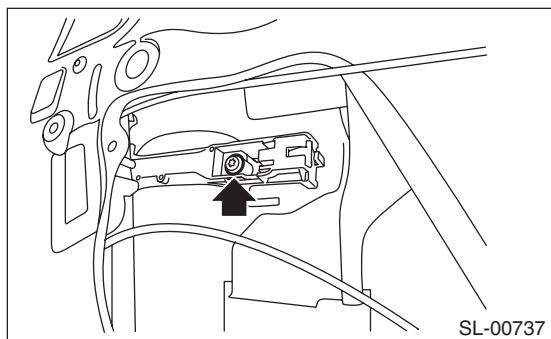

- 10) Remove the frame assembly from inside the door panel.

CAUTION:

Do not apply excessive force to remove the handle from the door panel. The door panel may become deformed.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to SL-2, DOOR LOCK ASSEMBLY, COMPONENT, General Description.>

C: INSPECTION

- 1) Check that the latch joins securely.
- 2) Check the handle and wire for smooth operation.