


Sunroof Switch

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)


6. Sunroof Switch

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the spot map light lens (A) and sunroof switch mounting screws (B).

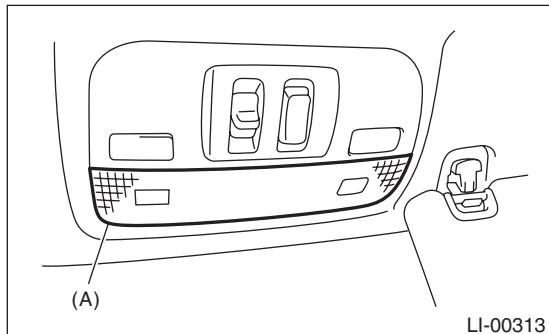


LI-00313

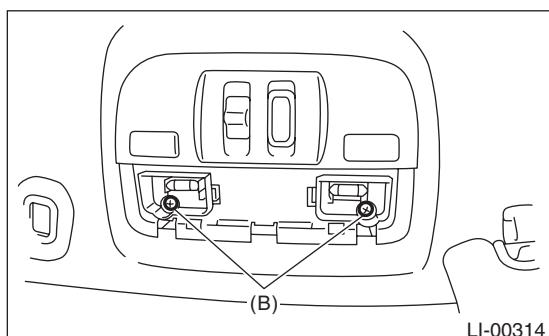


LI-00314

- 3) Disconnect the harness connector and remove the spot map light.
- 4) Remove the four screws and remove the sunroof switch bracket from the spot map light.

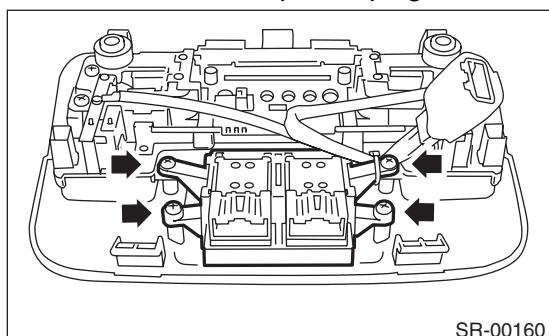

SR-00160

- 5) Remove the sunroof switch from the bracket.

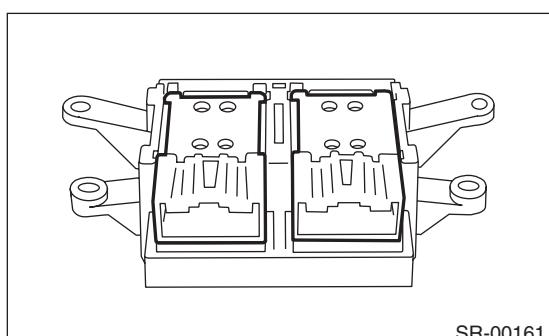


SR-00161

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

Measure the sunroof switch resistance.

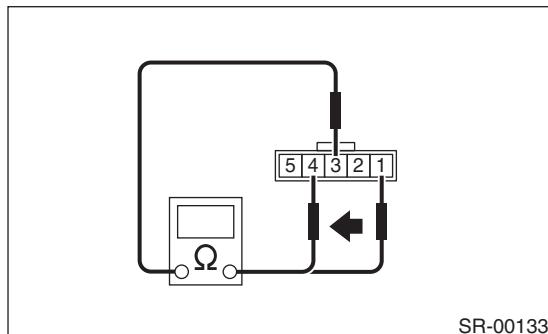

SR-00133

Switch position	Terminal No.	Standard	Connector No.
Open	1 and 3	Less than 1 Ω	R128
Close	3 and 4	Less than 1 Ω	
Tilt up	1 and 3	Less than 1 Ω	R187
Tilt down	3 and 4	Less than 1 Ω	

Replace the sunroof switch if defective.

NOTE:

If the glass lid does not operate or is not supplied with power, move the glass lid using the hexagon wrench. <Ref. to SR-5, FORCED DRIVE, Glass Lid.>