


7. Sunshade

A: REMOVAL


- 1) Remove the sunroof assembly. <Ref. to SR-6, REMOVAL, Sunroof Assembly.>
- 2) Remove the two screws to remove the drip rail.

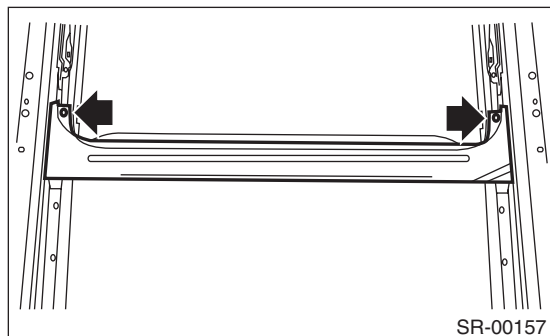

- 3) Remove the sunshade.

CAUTION:

Being careful not to damage the shade knob, pull out it while bending the sunshade.

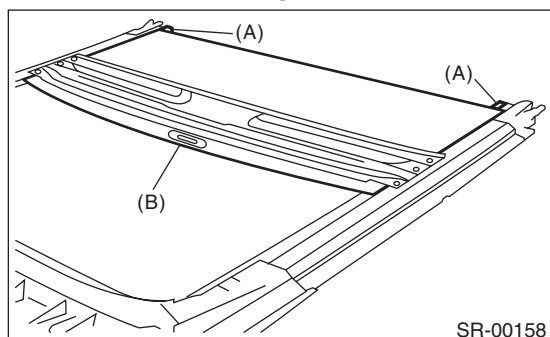

- (1) Remove the shade stopper (A).
- (2) Pull out the sunshade (B) from the frame assembly.


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

1. CHECK FOR MOVING LOAD OF SUNSHADE

- 1) Attach a spring scale to sunshade edge using a cloth.

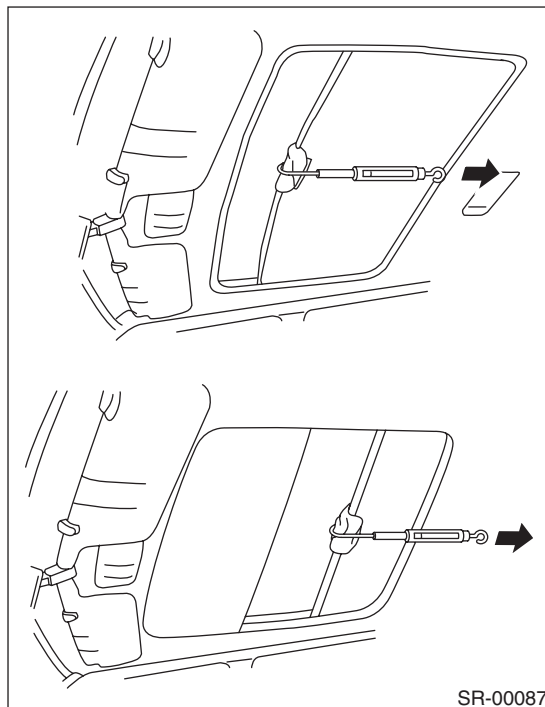

- 2) Pull the spring scale to measure moving load of the sunshade.

Moving load of sunshade:

Specification

$18.0 \pm 5.0 \text{ N}$ ($1.8 \pm 0.5 \text{ kgf}$, $13 \pm 3.7 \text{ lbf}$)

NOTE:

Moving load is larger at the beginning of pulling a spring scale, so take a spring scale reading while sunshade sliding smoothly.

- 3) If moving load exceeds specifications, check the glass lid, sunshade and frame assembly for improper installation.

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

EXTERIOR/INTERIOR TRIM



	Page
1. General Description	2
2. Front Grille	24
3. Front Hood Grille	25
4. Front Under Cover	26
5. Fuel Tank Protector	27
6. Mud Guard	28
7. Front Bumper	29
8. Rear Bumper	36
9. Cowl Panel	38
10. Roof Spoiler	39
11. Rear Spoiler	40
12. Side Sill Spoiler	41
13. Roof Molding	42
14. Door Trim	43
15. Instrument Panel Lower Cover	46
16. Glove Box	47
17. Console Box	48
18. Center Console	49
19. Instrument Panel Assembly	52
20. Lower Inner Trim	55
21. Upper Inner Trim	57
22. Rear Quarter Trim	58
23. Rear Shelf Trim	60
24. Trunk Room Trim	61
25. Sun Visor	62
26. Assist Grip	63
27. Roof Trim	64
28. Rear Gate Trim	67
29. Floor Mat	69
30. Rear Gate Garnish	70
31. Trunk Lid Garnish	71
32. Heat Shield Cover	72
33. Ornament	73