

## 6. Rear Differential Side Oil Seal

### A: INSPECTION

Check that there is no oil leakage from the side oil seal. If there is any leakage, replace the oil seal.


### B: REPLACEMENT

- 1) Remove the rear differential. <Ref. to DI-18, REMOVAL, Rear Differential.>
- 2) Remove the rear differential side oil seal using an ST or a screwdriver wrapped with vinyl tape to prevent the side retainer from scratching.  
ST 398527700 PULLER ASSY
- 3) Using the ST, install the oil seal to the side retainer.

NOTE:

Apply differential gear oil to the oil seal lips.

ST 398437700 DRIFT

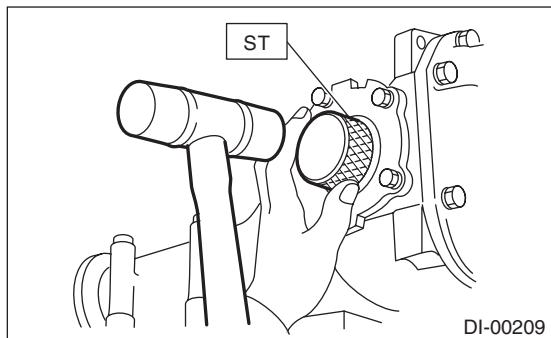

- 4) Install the rear differential. <Ref. to DI-20, INSTALLATION, Rear Differential.>