



3. Front Crossmember Support Plate

A: REMOVAL

- 1) Lift up the vehicle.
- 2) Remove the front under cover. <Ref. to EI-26, REMOVAL, Front Under Cover.>
- 3) Remove the bolt, and remove the front crossmember support plate.
 - Large type (Turbo type)

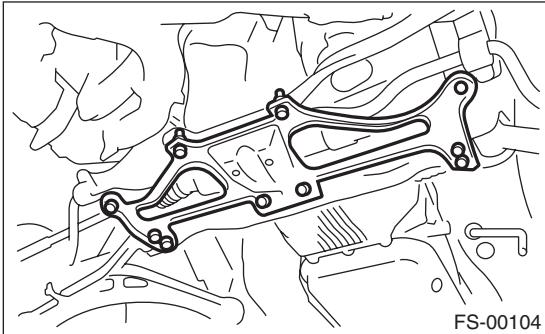

- Small type

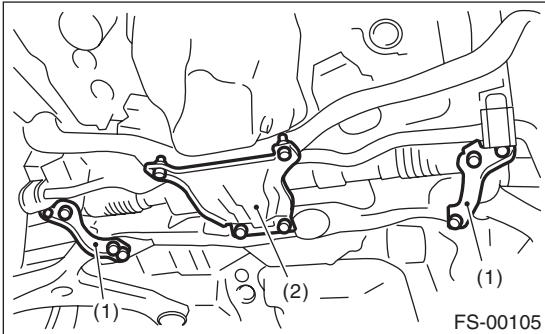

(1) Crossmember support plate
(2) Jack-up plate

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Tighten the small type crossmember support plate together with stabilizer bracket.

After attaching the stabilizer bracket to the crossmember, tighten the crossmember support plate together with the bracket.

Tightening torque:

Crossmember support plate:

60 N·m (6.1 kgf-m, 44.3 ft-lb)

Crossmember support plate (sections tightened together with the stabilizer bracket):

25 N·m (2.5 kgf-m, 18.4 ft-lb)

Jack-up plate:

60 N·m (6.1 kgf-m, 44.3 ft-lb)