

# General Description

## PARKING BRAKE


### 1. General Description

#### A: SPECIFICATION

Model	Rear drum brake	Rear disc brake
Type	Rear brake mechanical	Mechanical, drum in disc rear brakes
Effective drum diameter mm (in)	254 (10)	190 (7.48)
Lining dimensions (Length x Width x Thickness) mm (in)	243.8 x 40.0 x 4.5 (9.6 x 1.575 x 0.177)	165.8 x 30.0 x 2.8 (6.53 x 1.181 x 0.11)
Clearance adjustment	Automatic adjusting	Manual adjustment
Lever stroke Notches/N (kgf, lbf)	7 — 8/200 (20.4, 45)	


#### B: COMPONENT

##### 1. PARKING BRAKE (REAR DISC BRAKE)

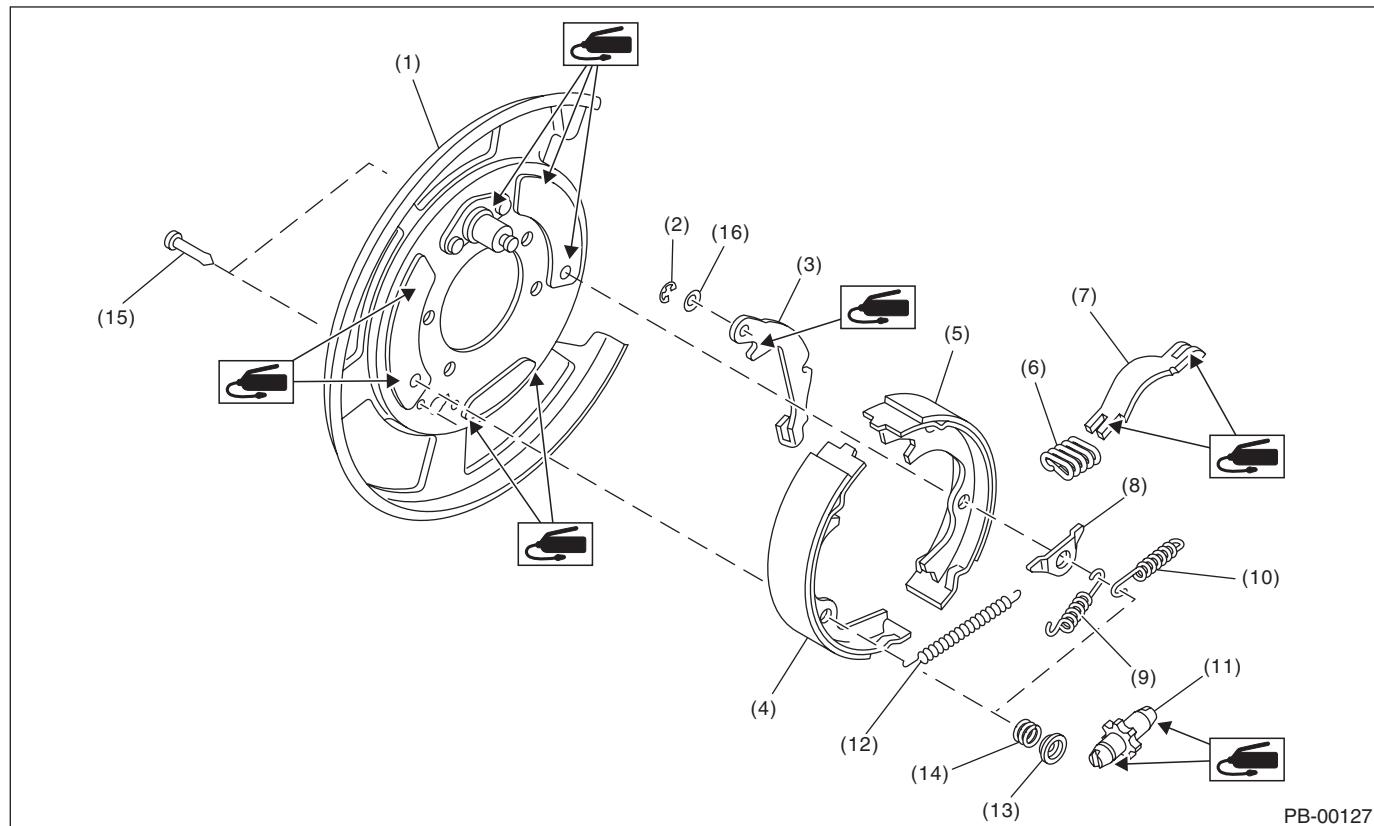

(1) Back plate	(7) Strut	(13) Shoe hold-down cup
(2) Retainer	(8) Shoe guide plate	(14) Shoe hold-down spring
(3) Lever	(9) Primary return spring	(15) Shoe hold-down pin
(4) Parking brake shoe (Primary)	(10) Secondary return spring	(16) Wave washer
(5) Parking brake shoe (Secondary)	(11) Adjuster	
(6) Strut spring	(12) Adjusting spring	

## 2. PARKING BRAKE LEVER &amp; CABLE

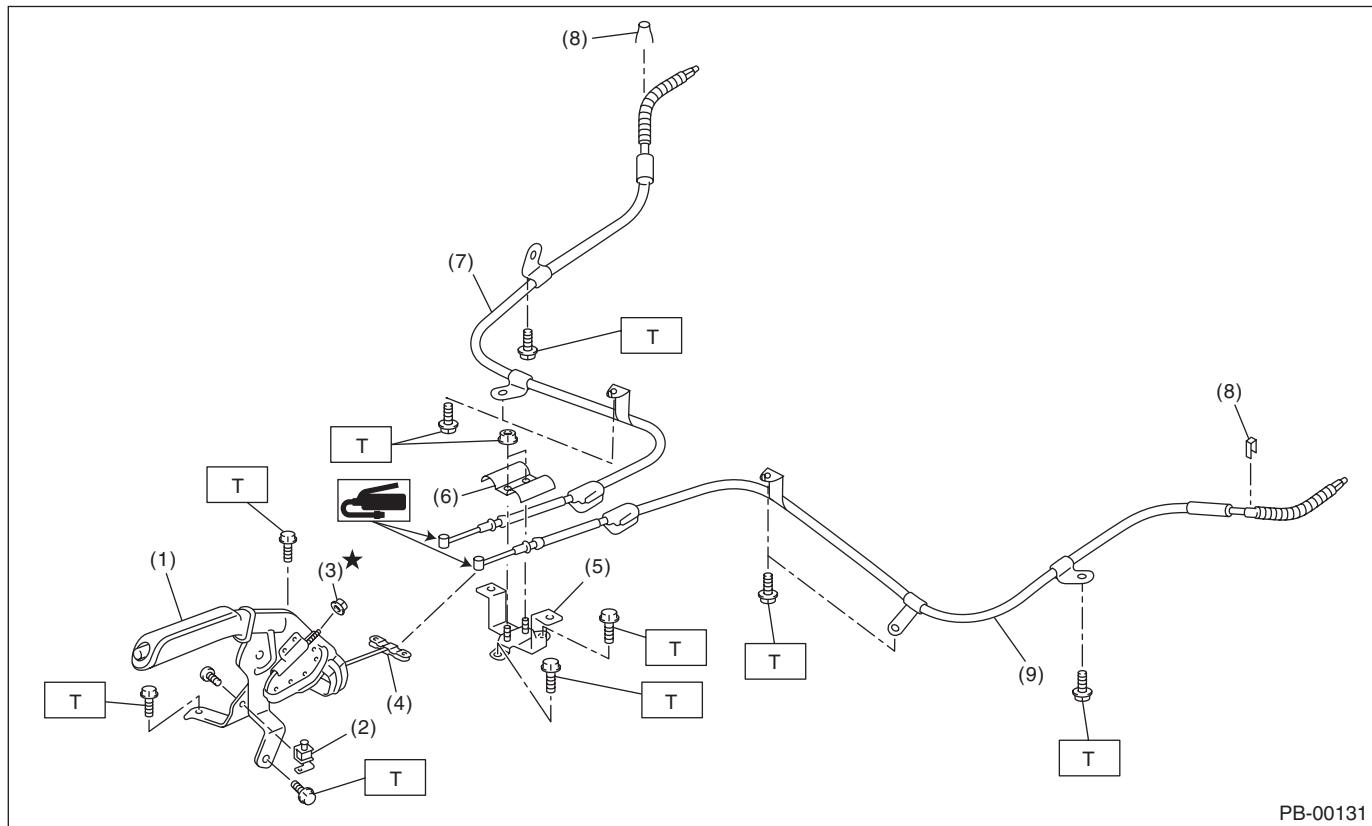

PB-00131

(1) Parking brake lever	(6) Clamp
(2) Parking brake switch	(7) Parking brake cable RH
(3) Adjusting nut (self-locking nut)	(8) Clamp
(4) Equalizer	(9) Parking brake cable LH
(5) Bracket	

**Tightening torque: N·m (kgf·m, ft-lb)****T: 18 (1.8, 13.3)****C: CAUTION**

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Use SUBARU genuine grease etc. or equivalent. Do not mix grease etc. of different grades or manufacturers.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Make sure grease does not come into contact with the parking shoes.