



### 6. Rear Shock Absorber

#### A: REMOVAL

- 1) Remove the luggage floor mat.(5 door model)
- 2) Remove the trunk room mat.(4 door model)
- 3) Remove the strut cap of the quarter trim.
- 4) Lift up the vehicle, and then remove the rear wheels.
- 5) Remove the nut and disconnect the rear stabilizer link.
- 6) Remove the shock absorber lower bolt.
- 7) Disconnect the rear lateral link.

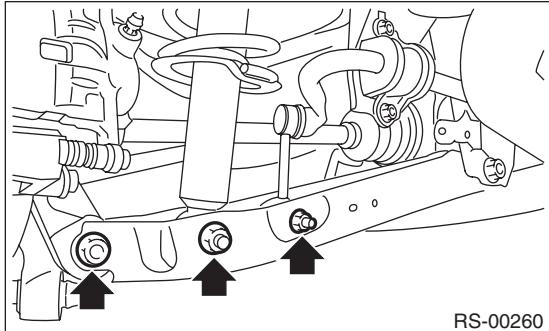

- 8) Remove the shock absorber mount nut.

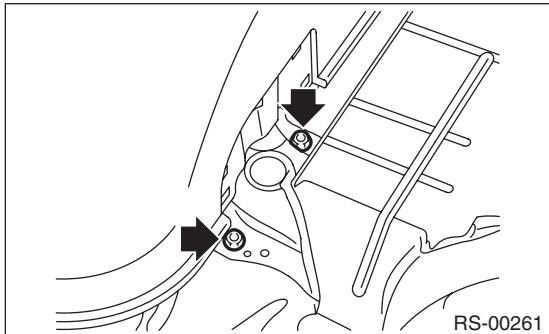

- 9) Remove the shock absorber.

#### B: INSTALLATION

##### CAUTION:

- Be sure to use a new self-locking nut.
- Always tighten the bushing in the state where the vehicle is at curb weight and the wheels are in full contact with the ground.

- 1) Install in the reverse order of removal.

##### *Tightening torque:*

Refer to "COMPONENT" of "General Description" for the tightening torque. <Ref. to RS-3, **COMPONENT, General Description**.>

- 2) Check the wheel alignment and adjust it if necessary.

#### C: DISASSEMBLY

Refer to "Front Strut" for disassembly procedure.  
<Ref. to FS-22, **DISASSEMBLY, Front Strut**.>

#### D: ASSEMBLY

Refer to "Front Strut" for installation procedures.  
<Ref. to FS-22, **ASSEMBLY, Front Strut**.>


#### E: INSPECTION

Refer to "Front Strut" for inspection procedures.  
<Ref. to FS-23, **INSPECTION, Front Strut**.>

#### F: DISPOSAL

##### CAUTION:

- Before handling the shock absorber, be sure to wear goggles to protect eyes from gas, oil and cutting powder.
  - Do not disassemble the shock absorber or place it into a fire.
  - Drill a hole into shock absorbers in case of discarding shock absorbers filled with gas.
- 1) Place the shock absorber on a level surface with the piston rod fully expanded.
  - 2) Make a hole into the specified position 30 mm (1.18 in) deep using a drill with 2 — 3 mm (0.08 — 0.12 in) diameter.

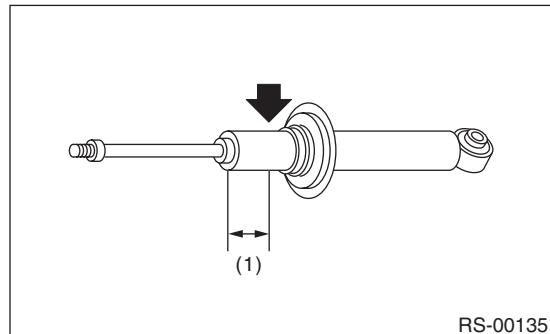

(1) 40 mm (1.57 in)