


Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

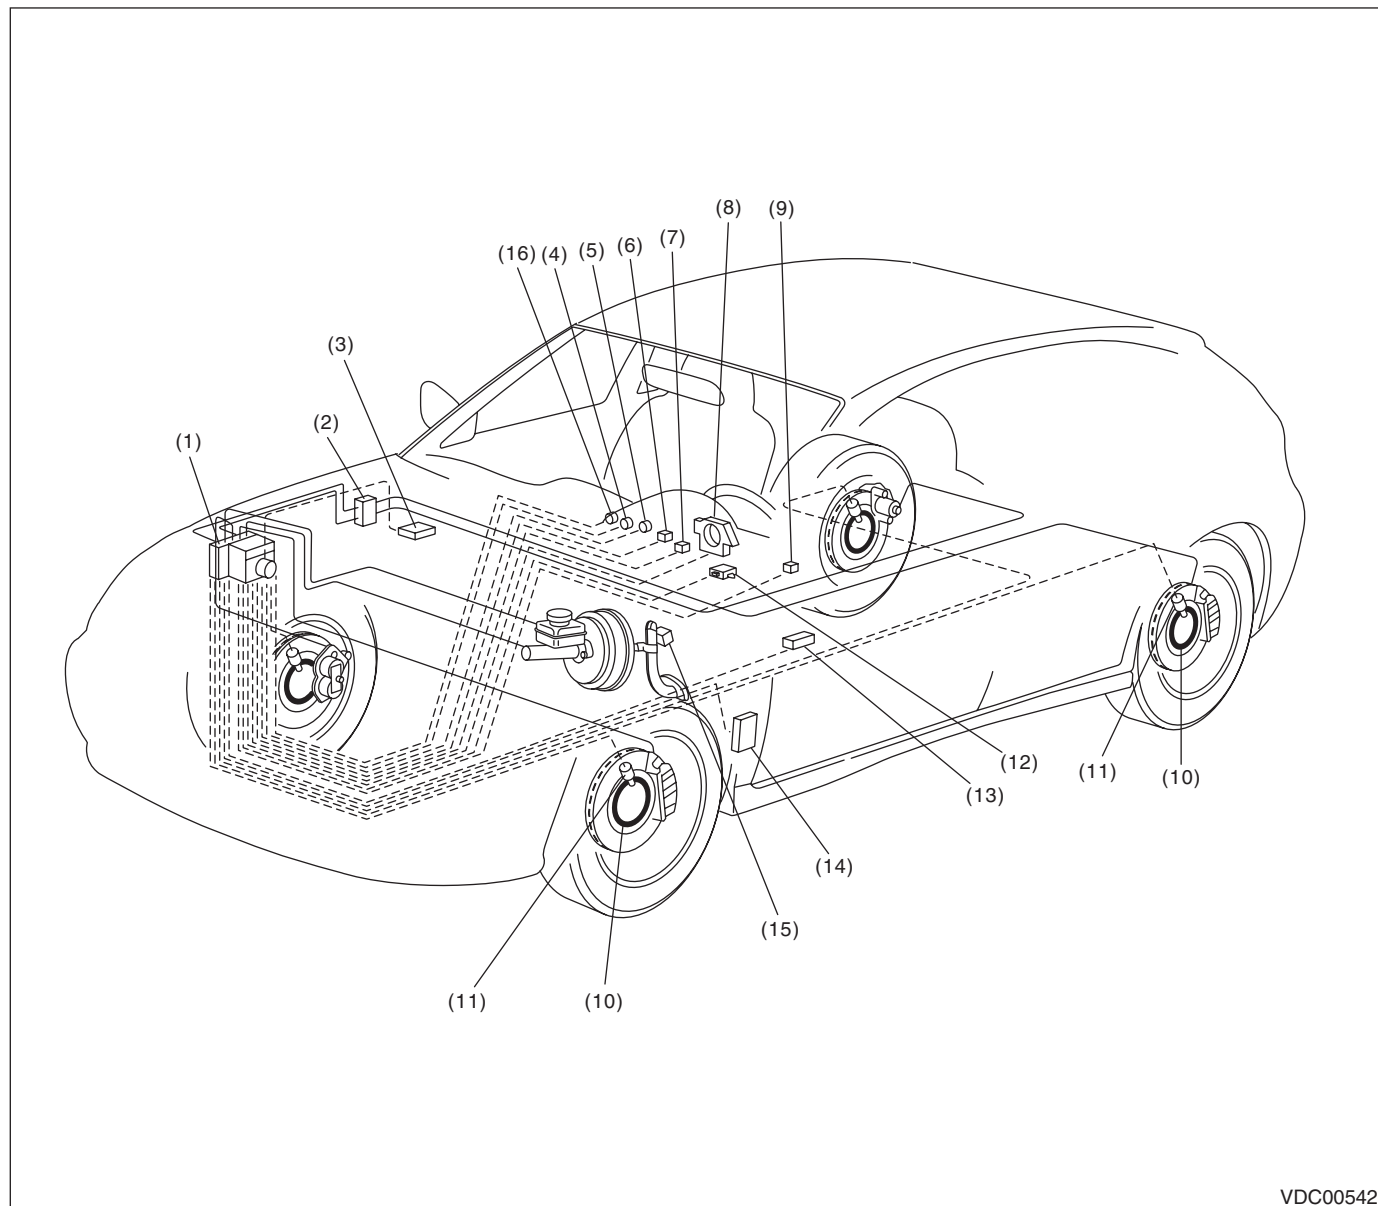

VDC00542

- | | | |
|---|---|--|
| (1) VDC control module and hydraulic control unit (VDCCM&H/U) | (7) VDC warning light & VDC OFF indicator light | (13) Data link connector |
| (2) Connector | (8) Steering angle sensor | (14) Engine control module (ECM) |
| (3) Transmission control module (TCM) | (9) VDC OFF switch | (15) Stop light and brake switch |
| (4) Brake warning light (EBD warning light) | (10) Magnetic encoder | (16) Hill start assist warning light (MT model only) |
| (5) ABS warning light | (11) ABS wheel speed sensor | |
| (6) VDC indicator light | (12) Yaw rate & G sensor | |

Electrical Component Location

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

