

## 7. Read Diagnostic Trouble Code (DTC)

### A: OPERATION

- 1) On «Main Menu» display, select {Each System Check}.
- 2) On «System Selection Menu» display, select {Brake Control System}.
- 3) Click the [OK] button after {VDC} is displayed.
- 4) On «Brake Control Diagnosis» display, select {Diagnostic Code(s) Display}.
- 5) Record the DTC and data.

#### NOTE:

- For detailed operation procedures, refer to “PC application help for Subaru Select Monitor”.
- For details concerning DTCs, refer to “List of Diagnostic Trouble Code (DTC)”. <Ref. to VDC(diag)-34, List of Diagnostic Trouble Code (DTC).>
- Up to 3 DTCs are displayed in the order of detection.
- If a particular DTC is not stored in memory properly at the occurrence of problem (due to a drop in VDCCM&H/U power supply etc.), the DTC suffixed with a question mark “?” is displayed on Subaru Select Monitor display screen. This shows it may be an unreliable reading.

| Display    | Contents to be displayed                                                                         |
|------------|--------------------------------------------------------------------------------------------------|
| (Current)  | The current DTC is displayed on Subaru Select Monitor display screen.                            |
| (Before 1) | The latest DTC in previous troubles is displayed on Subaru Select Monitor display screen.        |
| (Before 2) | The second latest DTC in previous troubles is displayed on Subaru Select Monitor display screen. |
| (Before 3) | The third latest DTC in previous problems is displayed on Subaru Select Monitor display screen.  |