

4. Steel Wheel

A: REMOVAL

Refer to “Aluminum Wheel” for removal procedure of steel wheels. <Ref. to WT-6, REMOVAL, Aluminum Wheel.>

B: INSTALLATION

Refer to “Aluminum Wheel” for installation procedure of steel wheels. <Ref. to WT-6, INSTALLATION, Aluminum Wheel.>

C: INSPECTION

Refer to “Aluminum Wheel” for inspection procedure of steel wheels. <Ref. to WT-6, INSPECTION, Aluminum Wheel.>

Rim runout

Axial runout limit	Radial runout limit
1.5 mm (0.059 in)	