


7. Full Wheel Cap

A: REMOVAL

Insert a remover into the notch located diagonally to the valve hole, and remove the cap by prying the remover to the tire side.

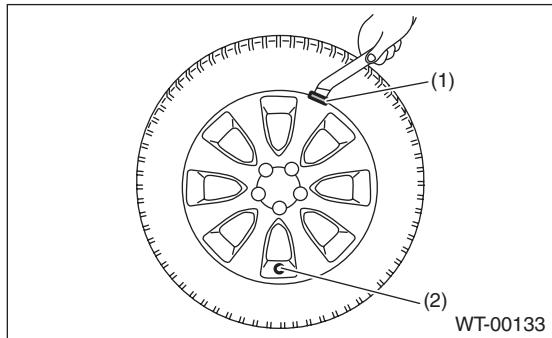


(1) Cutout portion

(2) Valve hole

B: INSTALLATION

- 1) Align the valve with the valve hole in the hubcap.
- 2) Install the hubcap by tapping it in the order from (1) to (3) described in the figure.

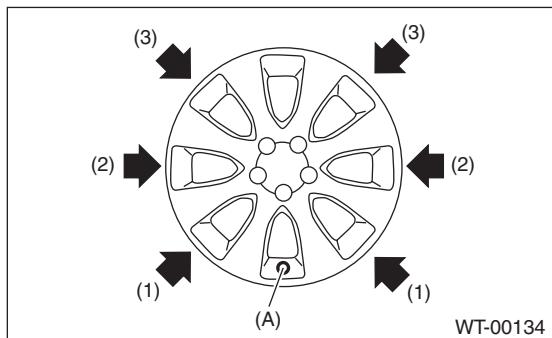

(A) Valve hole

C: INSPECTION

Check the hubcap for damage.