


## 7. Radiator Cap

### A: INSPECTION

- 1) Attach the radiator cap tester to radiator cap.

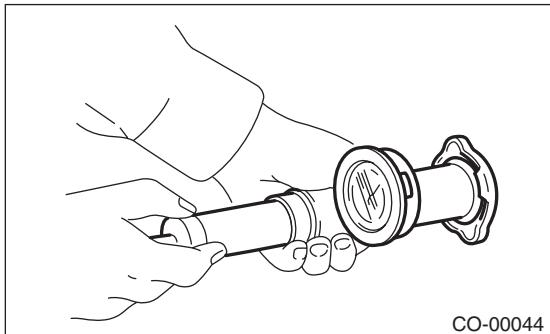

- 2) Increase pressure until the radiator cap tester gauge pointer stops. Radiator cap is functioning properly if it holds the service limit pressure for 5 — 6 seconds. Replace the cap if it is opened under a pressure less than the service limit value.

**Standard:**

93 — 123 kPa (0.95 — 1.25 kg/cm<sup>2</sup>, 14 — 18 psi)

**Service limit:**

83 kPa (0.85 kg/cm<sup>2</sup>, 12 psi)

**CAUTION:**

Be sure to remove foreign matter and rust from the cap in advance. Otherwise, results of pressure test will be incorrect.