

Shut Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

13.Shut Valve

A: REMOVAL


WARNING:

Place “NO OPEN FLAMES” signs near the working area.


CAUTION:

Be careful not to spill fuel.

- 1) Remove the fuel filler pipe. <Ref. to FU(H4SO)-61, REMOVAL, Fuel Filler Pipe.>
- 2) Disconnect the evaporation hose from the shut valve.

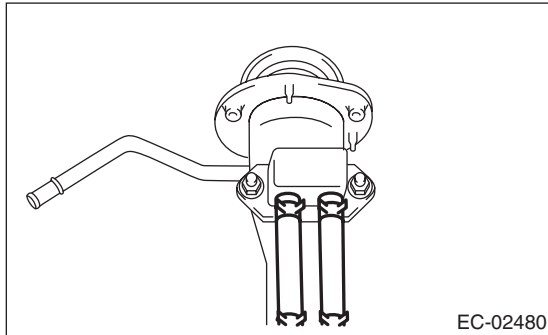

- 3) Remove the shut valve from the fuel filler pipe.

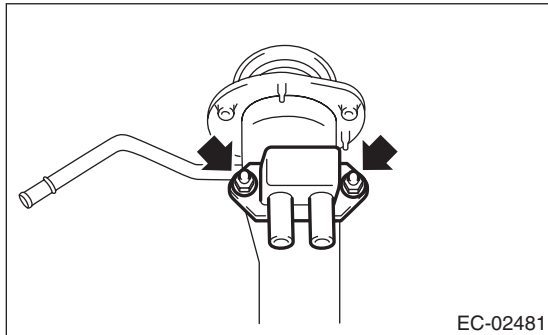


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

4.5 N·m (0.5 kgf-m, 3.3 ft-lb)

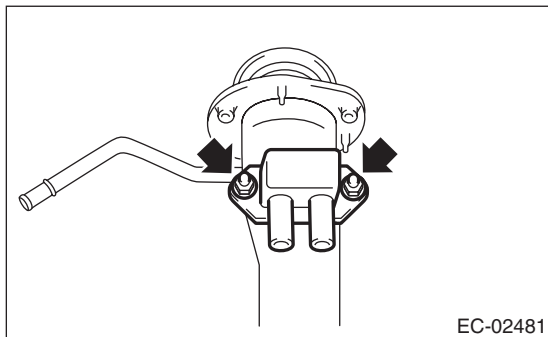

C: INSPECTION

Make sure the hoses are not cracked or loose.