

# PCV Hose Assembly

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

## 15.PCV Hose Assembly


### A: REMOVAL

#### CAUTION:

**Do not remove unless the PCV hose, diagnostics connector and PCV valve are damaged.**

- 1) Remove the air intake chamber. <Ref. to IN(H4SO)-7, REMOVAL, Air Intake Chamber.>
- 2) Fit the depression in the ST with the protrusion on the clamp to unlock.
- 3) Remove the PCV hose assembly.

ST 18353AA000 CLAMP PLIERS

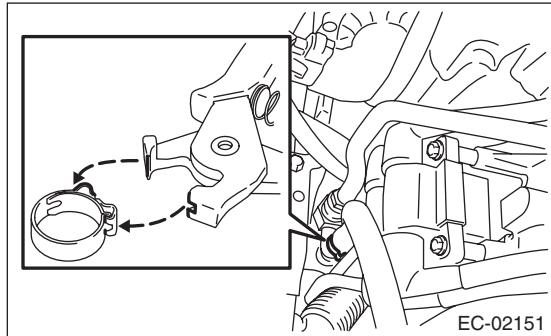


### B: INSTALLATION

#### NOTE:

Replace the clamp with a new part.

- 1) Install the PCV hose assembly, then lock by fitting the ST on the clamp protrusion.


ST 18353AA000 CLAMP PLIERS

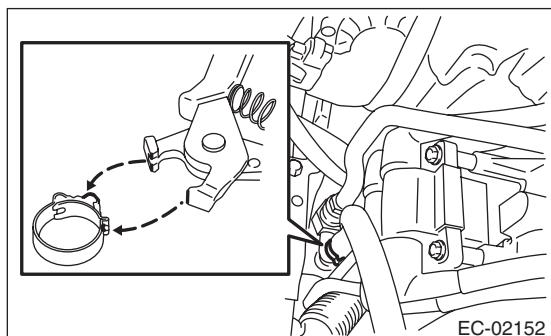

- 2) Install the air intake chamber. <Ref. to IN(H4SO)-7, INSTALLATION, Air Intake Chamber.>

### C: INSPECTION

- 1) Measure the resistance between PCV hose assembly terminals.

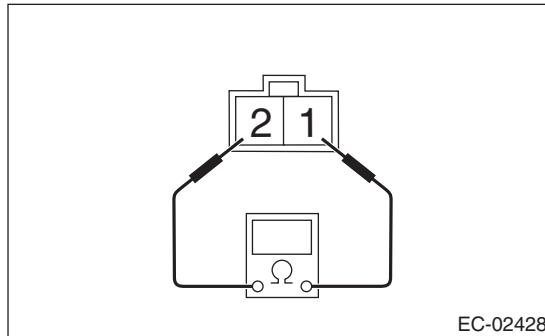

Terminal No.	Standard
1 and 2	Less than 1 Ω

- 2) Make sure that there are no cracks or other damages on PCV hose assembly.

# INTAKE (INDUCTION)

# *IN(H4SO)*

---

	Page
1. General Description .....	2
2. Air Cleaner Element .....	4
3. Air Cleaner Case .....	5
4. Air Intake Chamber .....	7
5. Air Intake Duct .....	8
6. Resonator Chamber .....	9