

6. EGR Valve

A: REMOVAL

For removal procedures, refer to the “FU(H4SO)” section. <Ref. to FU(H4SO)-35, REMOVAL, EGR Valve.>

B: INSTALLATION

For installation procedure, refer to “FU(H4SO)” section. <Ref. to FU(H4SO)-35, INSTALLATION, EGR Valve.>

C: INSPECTION

For inspection procedures, refer to the “FU(H4SO)” section. <Ref. to FU(H4SO)-35, INSPECTION, EGR Valve.>