

3. Center Exhaust Pipe

A: REMOVAL

- 1) After removing the center and front exhaust pipes as one unit, separate them. Refer to "Front Exhaust Pipe" for the removal procedure. <Ref. to EX(H4SO)-6, REMOVAL, Front Exhaust Pipe.>
- 2) Remove the front oxygen (A/F) sensor and rear oxygen sensor. <Ref. to FU(H4SO)-41, REMOVAL, Front Oxygen (A/F) Sensor.> <Ref. to FU(H4SO)-43, REMOVAL, Rear Oxygen Sensor.>

B: INSTALLATION

- 1) Install the front oxygen (A/F) sensor and rear oxygen sensor. <Ref. to FU(H4SO)-41, INSTALLATION, Front Oxygen (A/F) Sensor.> <Ref. to FU(H4SO)-43, INSTALLATION, Rear Oxygen Sensor.>
- 2) Install the center exhaust pipe and front exhaust pipe as one unit. Refer to "Front Exhaust Pipe" for the installation procedure. <Ref. to EX(H4SO)-7, INSTALLATION, Front Exhaust Pipe.>

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.