

EXHAUST


4. Rear Exhaust Pipe

A: REMOVAL

CAUTION:

Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.

- 1) Set the vehicle on a lift.
- 2) Lift up the vehicle.
- 3) Remove the rear exhaust pipe from center exhaust pipe.

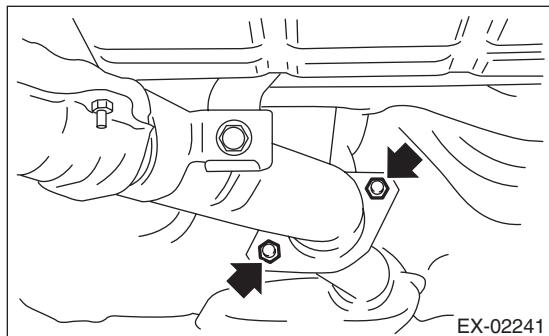


- 4) Remove the rear exhaust pipe from the muffler.


CAUTION:

Be careful not to drop the rear exhaust pipe.

- 4 DOOR MODEL

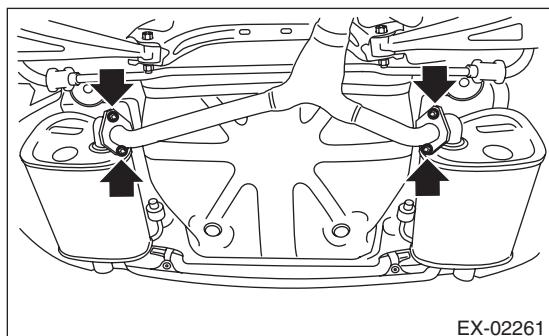


- 5 DOOR MODEL

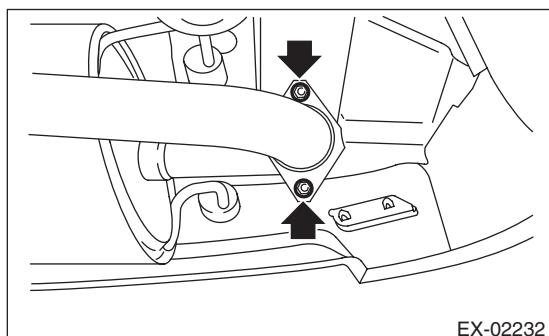

- 5) Apply a coat of spray type lubricant to the mating area of cushion rubber.

- 6) Remove the rear exhaust pipe from the cushion rubber.

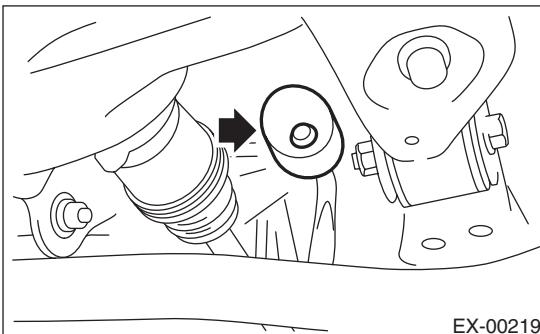


B: INSTALLATION

- 1) Apply a coat of spray type lubricant to the mating area of cushion rubber.
- 2) Install the rear exhaust pipe to cushion rubber.

NOTE:

After assembling, degrease the lubricant which was applied to the cushion rubber while removing/installing.

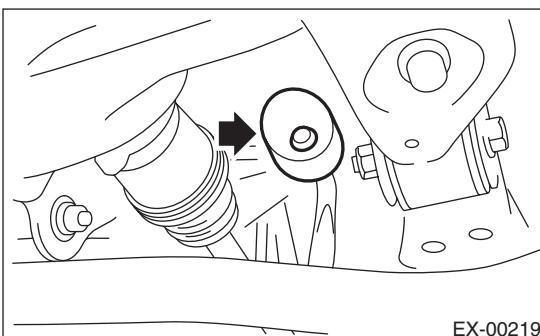

- 3) Install the rear exhaust pipe to the muffler.


NOTE:

Use a new gasket and self-locking nut.

Tightening torque:


48 N·m (4.9 kgf·m, 35.4 ft-lb)

- 4 DOOR MODEL

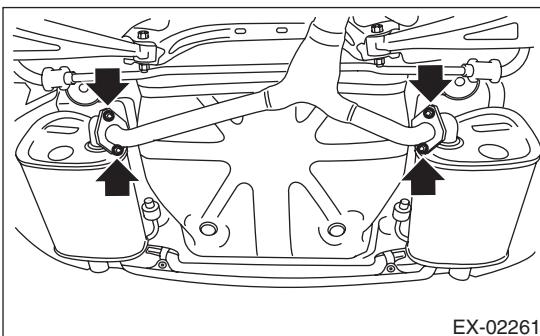

EX-02261

- 5 DOOR MODEL

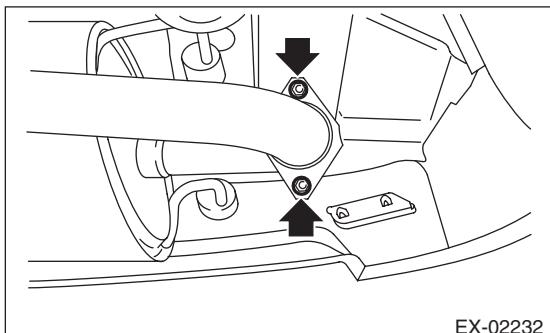


4) Install the rear exhaust pipe to center exhaust pipe.

NOTE:

Use a new gasket.

Tightening torque:

18 N·m (1.8 kgf·m, 13.3 ft-lb)

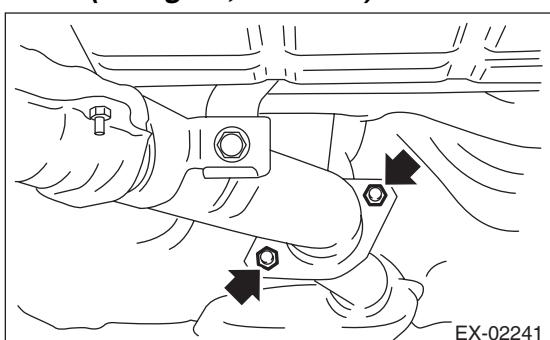

5) Lower the vehicle.

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.