

EXHAUST


5. Muffler

A: REMOVAL

CAUTION:


Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.

- 1) Set the vehicle on a lift.
- 2) Lift up the vehicle.
- 3) Remove the muffler from rear exhaust pipe.
- 4 DOOR MODEL

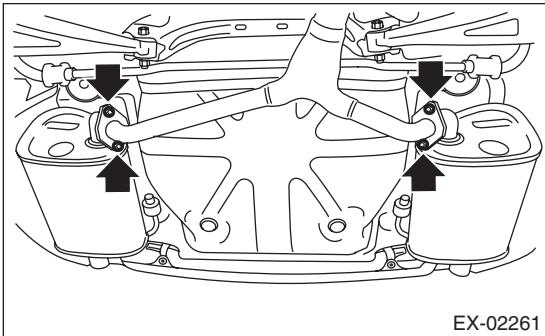

EX-02261

- 5 DOOR MODEL

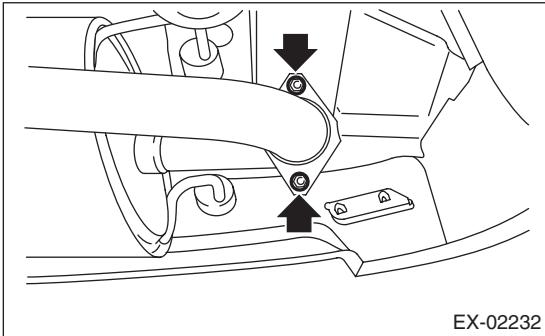


EX-02232

- 4) Apply a coat of spray type lubricant to the mating area of cushion rubber.
- 5) Remove the muffler from the cushion rubber.

CAUTION:


Be careful not to drop the muffler during removal.

- 4 DOOR MODEL

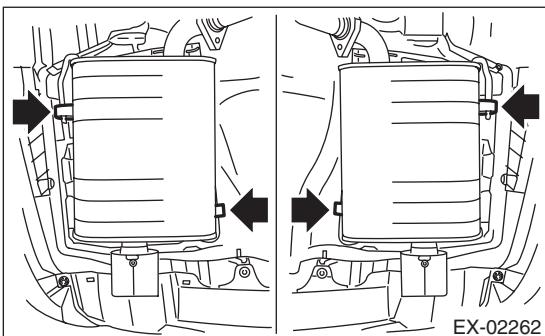

EX-02262

- 5 DOOR MODEL

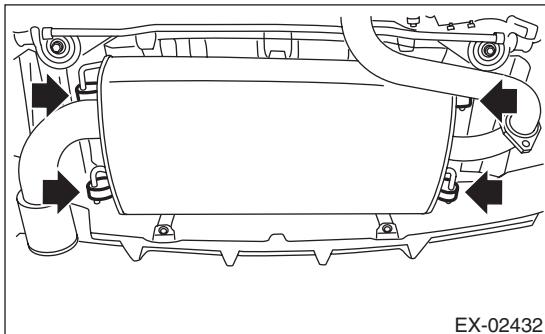

EX-02432

B: INSTALLATION

Install in the reverse order of removal.


NOTE:

- Use a new gasket and self-locking nut.
- After assembling, degrease the lubricant which was applied to the cushion rubber while removing/installing.

Tightening torque:


48 N·m (4.9 kgf·m, 35.4 ft-lb)

- 4 DOOR MODEL

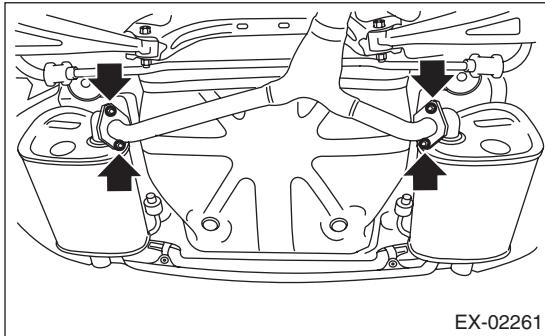

EX-02261

- 5 DOOR MODEL

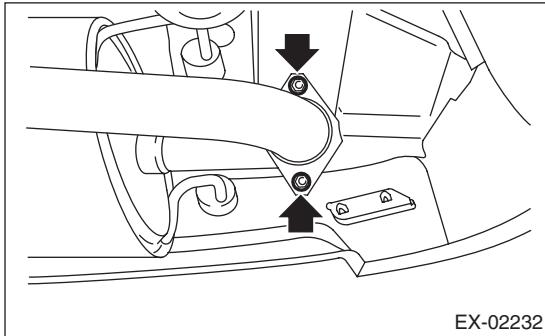

EX-02232

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.

COOLING

$CO(H_4SO)$

	Page
1. General Description	2
2. Radiator Fan System	7
3. Engine Coolant	13
4. Water Pump	15
5. Thermostat	17
6. Radiator	19
7. Radiator Cap	22
8. Radiator Main Fan and Fan Motor	23
9. Radiator Sub Fan and Fan Motor	25
10. Reservoir Tank	27
11. Engine Cooling System Trouble in General	28