



## 11. EGR Valve

### A: REMOVAL


- 1) Disconnect the ground cable from battery.

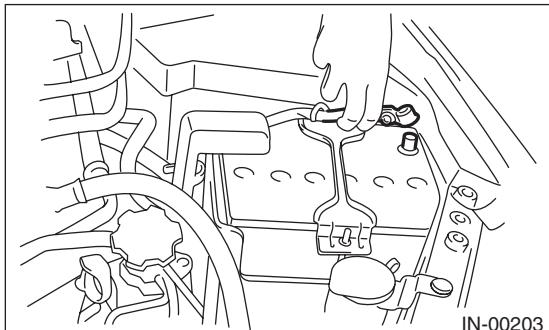

- 2) Disconnect the connector from EGR valve.

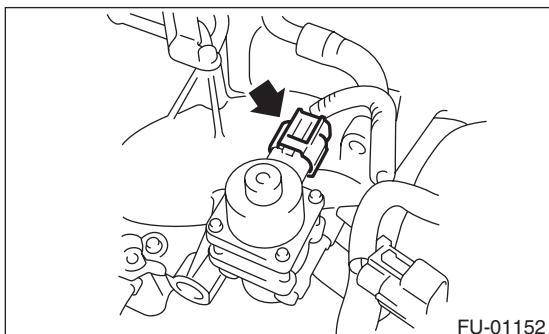

- 3) Remove the EGR valve from intake manifold.

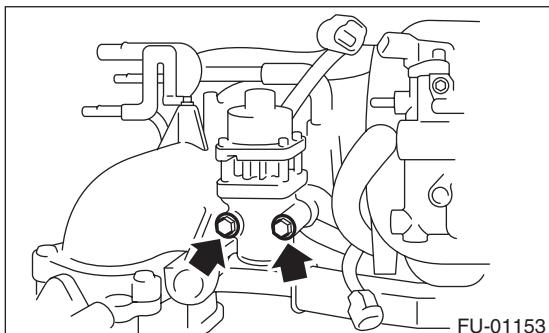

### B: INSTALLATION

Install in the reverse order of removal.

NOTE:


Use a new gasket.

**Tightening torque:**

**19 N·m (1.9 kgf·m, 14.0 ft-lb)**

### C: INSPECTION

- 1) Measure the resistance between EGR valve terminals.

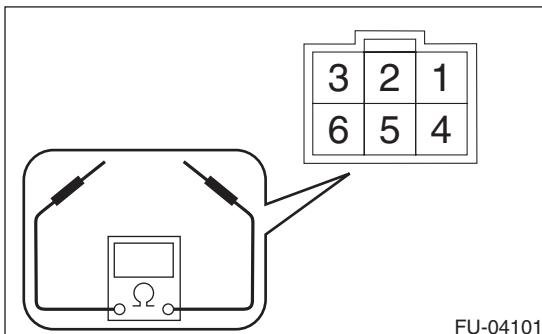

Terminal No.	Standard
2 and 1	$22 \pm 2 \Omega$
2 and 3	$22 \pm 2 \Omega$
5 and 4	$22 \pm 2 \Omega$
5 and 6	$22 \pm 2 \Omega$