



## 9. Manifold Absolute Pressure Sensor

### A: REMOVAL

- 1) Disconnect the ground cable from battery.

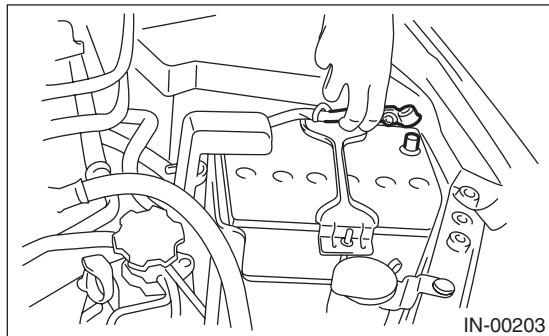

- 2) Disconnect the connector from the manifold absolute pressure sensor and remove the manifold absolute pressure sensor from throttle body.

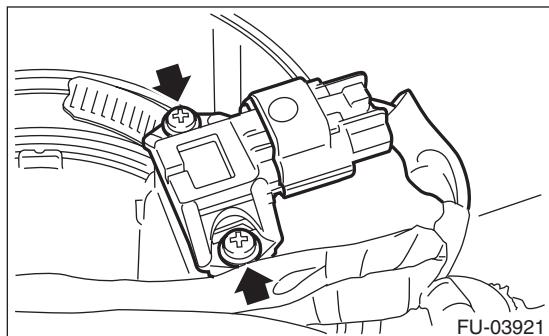

### B: INSTALLATION

Install in the reverse order of removal.

NOTE:


Use new O-rings.

***Tightening torque:***

**2 N·m (0.2 kgf·m, 1.5 ft-lb)**

### C: INSPECTION

Measure the resistance between manifold absolute pressure sensor.

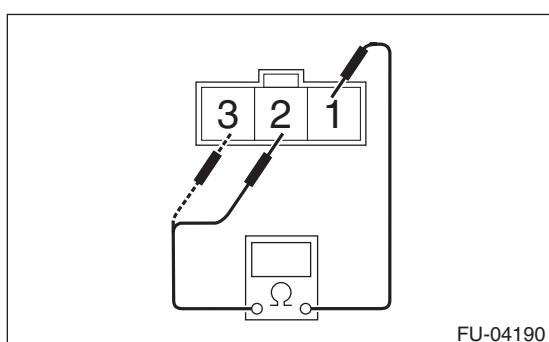

Terminal No.	Standard
1 and 2	3.5 kΩ or less
1 and 3	2.5 kΩ or less