


3. Air Cleaner Case


A: REMOVAL

1) Disconnect the ground cable from battery.

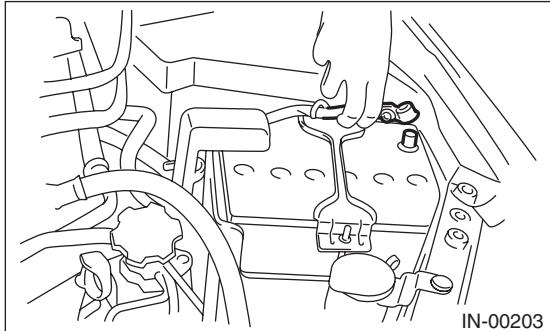


2) Remove the air intake duct. <Ref. to IN(H4SO)-8, REMOVAL, Air Intake Duct.>

3) Disconnect the connector (A) from the mass air flow and intake air temperature sensor, and remove the clip (B).

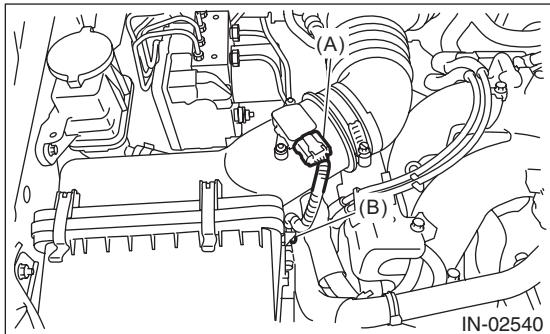


4) Loosen the clamp (A) which connects the air cleaner case to intake boot.


5) Remove the clips (B) from the air cleaner case (front).

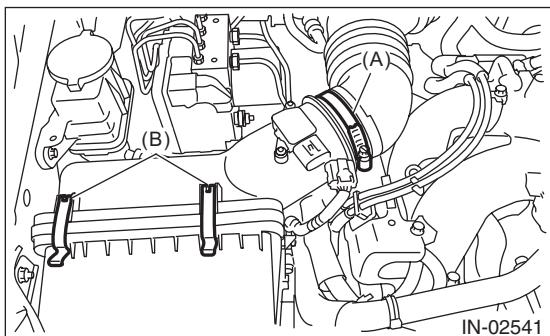

6) Remove the air cleaner case (rear) and air cleaner element.

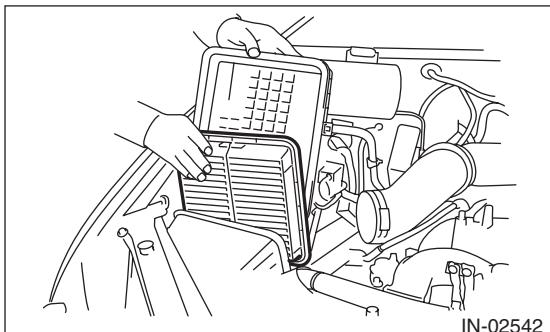

7) Remove the bolt (A) and nut (B) which secure the air cleaner case (front) to the body.

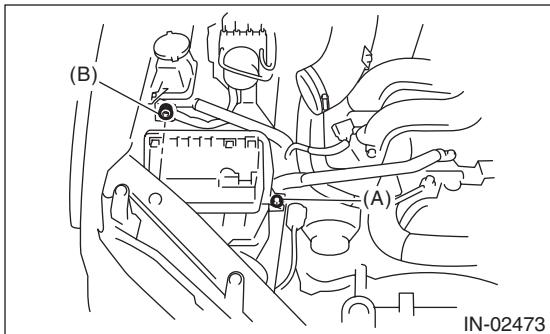

8) Remove the air cleaner case (front).

B: INSTALLATION

1) Install the bolt (A) and nut (B) which secure the air cleaner case (front) to the body.


Tightening torque:

Bolt (A)

6 N·m (0.6 kgf·m, 4.4 ft-lb)

Nut (B)

7.5 N·m (0.8 kgf·m, 5.5 ft-lb)

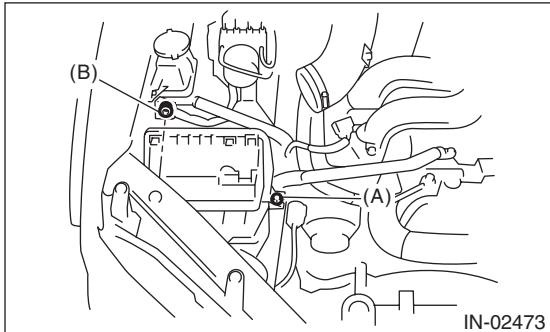


2) Install the air cleaner case (rear) and air cleaner element.

Air Cleaner Case


INTAKE (INDUCTION)

NOTE:

When installing the air cleaner case (rear), align the protrusion of the air cleaner case (rear) to the hole on the air cleaner case (front) to install.

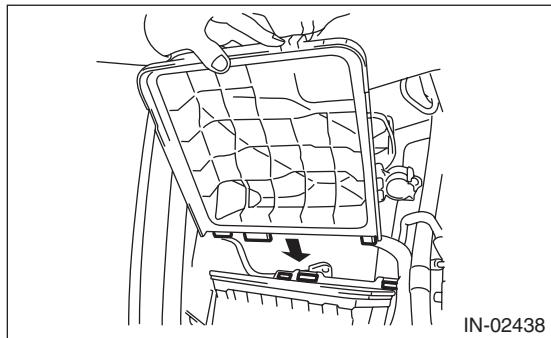

6) Connect the ground cable to battery.

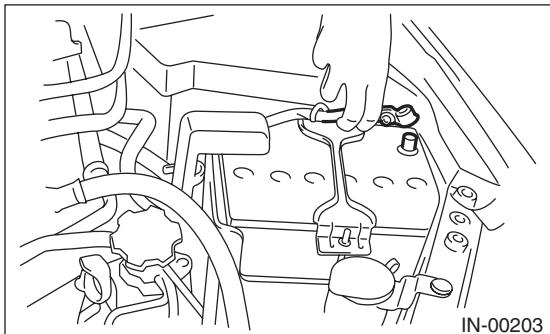

C: INSPECTION


Check for cracks or loose connections.

3) Install the clips (B) to the air cleaner case (front), then tighten the clamp (A) that connects the air cleaner case (rear) to the intake boot.


Tightening torque:

Clamp (A)

3 N·m (0.3 kgf·m, 2.2 ft-lb)

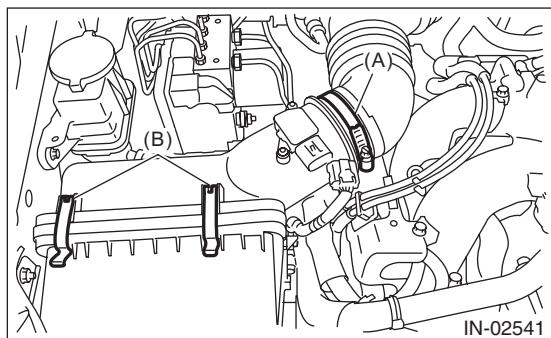

4) Connect the connector (A) to the mass air flow and intake air temperature sensor, and fasten the harness to clip (B).

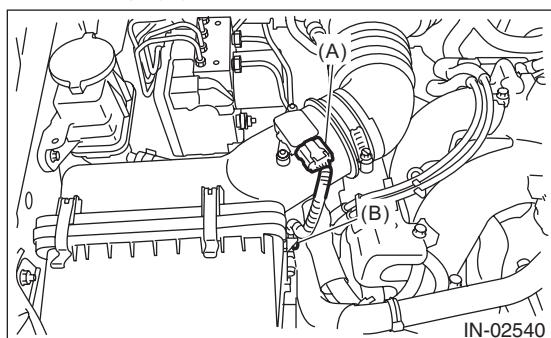

5) Install the air intake duct. <Ref. to IN(H4SO)-8, INSTALLATION, Air Intake Duct.>