

6. Resonator Chamber

A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for the removal procedure. <Ref. to IN(H4SO)-5, REMOVAL, Air Cleaner Case.>

B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for installation procedure. <Ref. to IN(H4SO)-5, INSTALLATION, Air Cleaner Case.>

C: INSPECTION

Check for cracks or loose connections.

Resonator Chamber

INTAKE (INDUCTION)

MECHANICAL

ME(H4SO)

	Page
1. General Description	2
2. Compression	22
3. Idle Speed	23
4. Ignition Timing	24
5. Intake Manifold Vacuum	25
6. Engine Oil Pressure	26
7. Fuel Pressure	27
8. Valve Clearance	28
9. Engine Assembly	30
10. Engine Mounting	37
11. Preparation for Overhaul	38
12. V-belt	39
13. Crank Pulley	46
14. Timing Belt Cover	48
15. Timing Belt	49
16. Cam Sprocket	54
17. Crank Sprocket	55
18. Valve Rocker Assembly	56
19. Camshaft	59
20. Cylinder Head	63
21. Cylinder Block	72
22. Oil Switching Solenoid Valve	93
23. Intake and Exhaust Valve	95
24. Piston	96
25. Connecting Rod	97
26. Crankshaft	98
27. Engine Trouble in General	99
28. Engine Noise	105