


## 14. Timing Belt Cover

### A: REMOVAL

NOTE:

Perform the work with the engine installed to body when replacing a single part.

- 1) Remove the V-belts. <Ref. to ME(H4SO)-39, REMOVAL, V-belt.>
- 2) Remove the crank pulley. <Ref. to ME(H4SO)-46, REMOVAL, Crank Pulley.>
- 3) Remove the timing belt cover LH.
- 4) Remove the front timing belt cover.

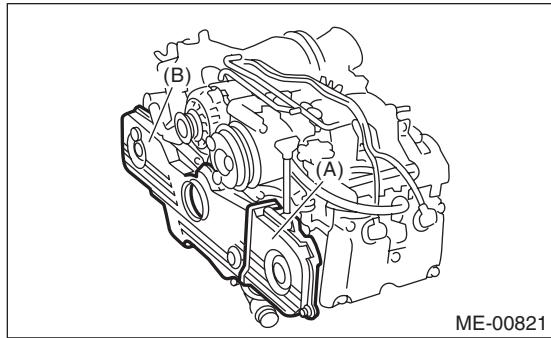

(A) Timing belt cover LH  
(B) Front timing belt cover

### B: INSTALLATION

- 1) Install the front timing belt cover.


***Tightening torque:***

**5 N·m (0.5 kgf-m, 3.7 ft-lb)**

- 2) Install the timing belt cover LH.

***Tightening torque:***

**5 N·m (0.5 kgf-m, 3.7 ft-lb)**

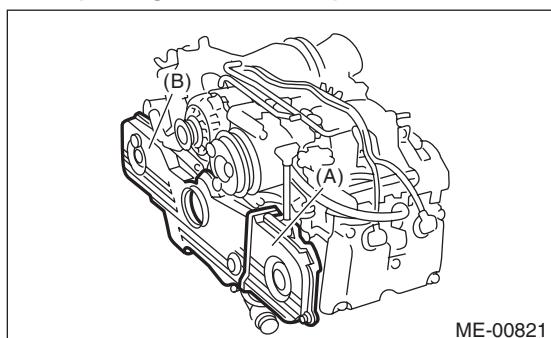

(A) Timing belt cover LH  
(B) Front timing belt cover

- 3) Install the crank pulley. <Ref. to ME(H4SO)-46, INSTALLATION, Crank Pulley.>

- 4) Install the V-belts. <Ref. to ME(H4SO)-39, INSTALLATION, V-belt.>

### C: INSPECTION

Check the timing belt cover for damage.