

23. Intake and Exhaust Valve

A: SPECIFICATION

Refer to "Cylinder Head" for removal and installation procedures of the intake and exhaust valves.

<Ref. to ME(H4SO)-63, REMOVAL, Cylinder Head. > <Ref. to ME(H4SO)-64, INSTALLATION, Cylinder Head. >