

7. Fuel Pressure

A: INSPECTION


CAUTION:

- Before removing the fuel pressure gauge, release the fuel pressure.
- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.

NOTE:

Check or replace the fuel pump and fuel delivery line if the fuel pressure is out of the standard.

- 1) Release the fuel pressure. <Ref. to FU(H4SO)-52, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 2) Open the fuel filler lid and remove the fuel filler cap.
- 3) Disconnect the fuel delivery hose from the fuel damper, and connect the fuel pressure gauge.

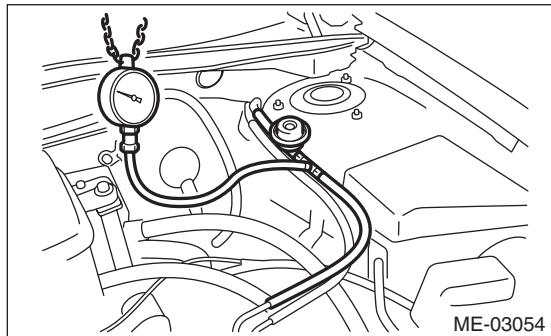

- 4) Start the engine.
- 5) Measure the fuel pressure after warming up the engine.

NOTE:

The fuel pressure gauge registers 10 to 20 kPa (0.1 to 0.2 kg/cm², 1 to 3 psi) higher than standard values during high-altitude operations.

Fuel pressure:***Standard***

339.5 — 360.5 kPa (3.5 — 3.7 kg/cm², 49 — 52 psi)