


11. Coolant Filler Tank

A: REMOVAL

CAUTION:

The coolant filler tank is pressurized when the engine and radiator are hot. Wait until engine and radiator cool down before working on the coolant filler tank.

- 1) Drain approximately 3.0 ℥ (3.2 US qt, 2.6 Imp qt) of coolant. *<Ref. to CO(H4DOTC)-14, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>*
- 2) Disconnect the engine coolant hoses from coolant filler tank.
- 3) Remove the bolts which secure the coolant filler tank.

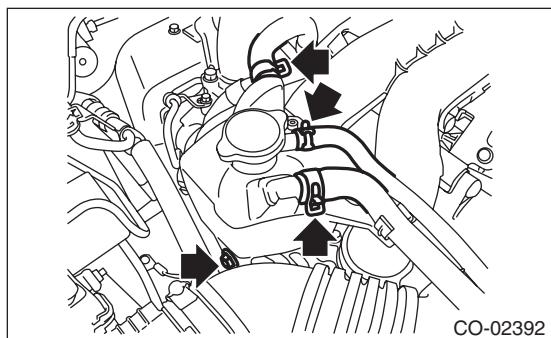

- 4) Disconnect the engine coolant hose which connects the under side of coolant filler tank.
- 5) Remove the coolant filler tank.

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

16 N·m (1.6 kgf·m, 11.8 ft-lb)

