

# Drain Valve

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

## 13.Drain Valve

### A: REMOVAL


Refer to "Canister" for removal procedures. <Ref. to EC(H4DOTC)-7, REMOVAL, Canister.>

### B: INSTALLATION

Refer to "Canister" for installation procedures. <Ref. to EC(H4DOTC)-9, INSTALLATION, Canister.>

### C: INSPECTION

Measure the resistance between drain valve terminals.

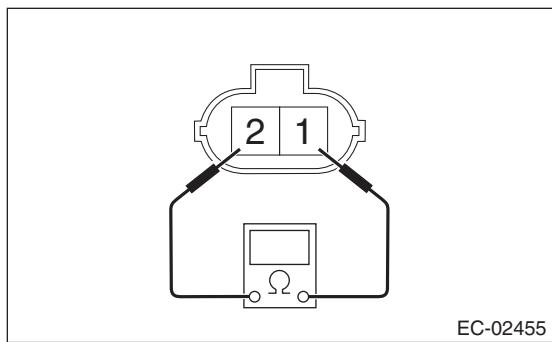

Terminal No.	Standard
1 and 2	20 — 30 Ω