

14. PCV Hose Assembly


A: REMOVAL

CAUTION:

Do not remove unless the PCV hose, diagnostics connector and PCV valve are damaged.

- 1) Remove the intake manifold. <Ref. to FU(H4DOTC)-16, REMOVAL, Intake Manifold.>
- 2) Remove the secondary air combination valve RH. <Ref. to EC(H4DOTC)-25, SECONDARY AIR COMBINATION VALVE RH, REMOVAL, Secondary Air Combination Valve.>
- 3) Fit the depression in the ST with the protrusion on the clamp securing PCV hose assembly to unlock.
- 4) Remove the PCV hose assembly.

ST 18353AA000 CLAMP PLIERS

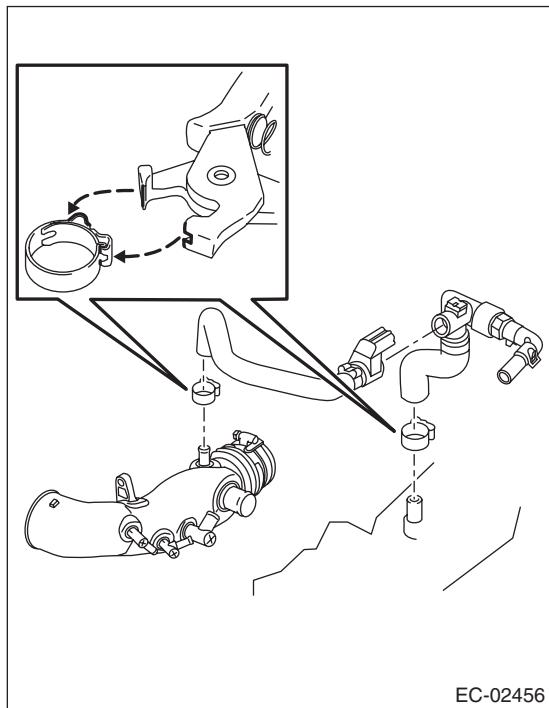


B: INSTALLATION

- 1) Install the PCV hose assembly, then lock by fitting the ST on the clamp protrusion.

NOTE:

Use a new clamp.

ST 18353AA000 CLAMP PLIERS

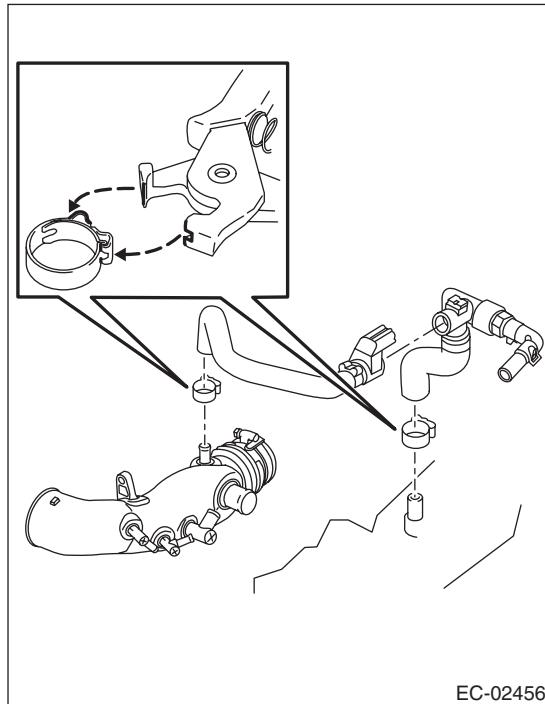


- 2) Install the secondary air combination valve RH. <Ref. to EC(H4DOTC)-26, SECONDARY AIR COMBINATION VALVE RH, INSTALLATION, Secondary Air Combination Valve.>

- 3) Install the intake manifold. <Ref. to FU(H4DOTC)-20, INSTALLATION, Intake Manifold.>

C: INSPECTION

- 1) Measure the resistance between PCV hose assembly terminals.

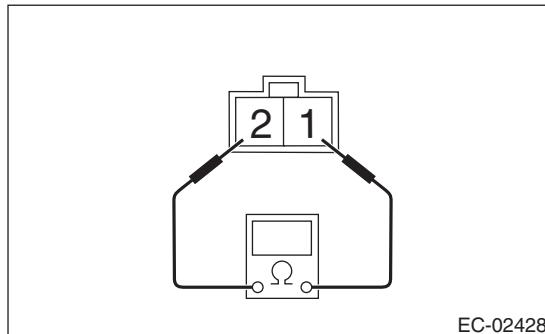

Terminal No.	Standard
1 and 2	Less than 1 Ω

- 2) Make sure that there are no cracks or other damages on PCV hose assembly.