

EXHAUST


6. Muffler

A: REMOVAL

CAUTION:


Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.

- 1) Set the vehicle on a lift.
- 2) Lift up the vehicle.
- 3) Remove the rear exhaust pipe from the muffler.
- 4 DOOR MODEL

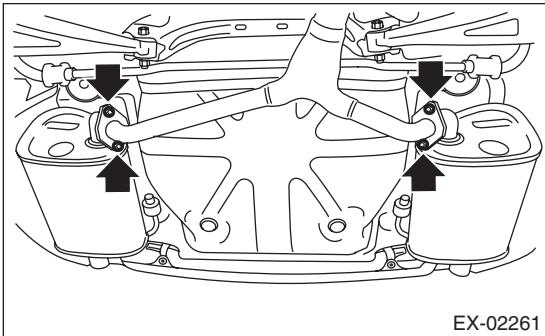

EX-02261

- 5 DOOR MODEL

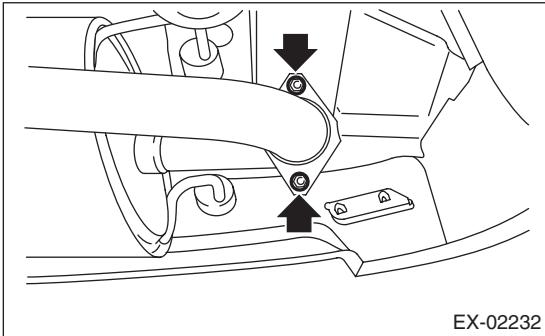


EX-02232

- 4) Apply a coat of spray type lubricant to the mating area of cushion rubber.
- 5) Remove the muffler from the cushion rubber.

CAUTION:


Be careful not to drop the muffler during removal.

- 4 DOOR MODEL

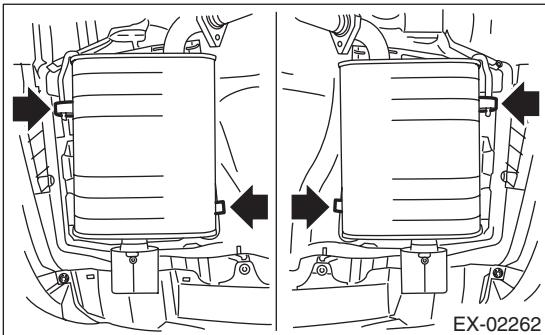

EX-02262

- 5 DOOR MODEL

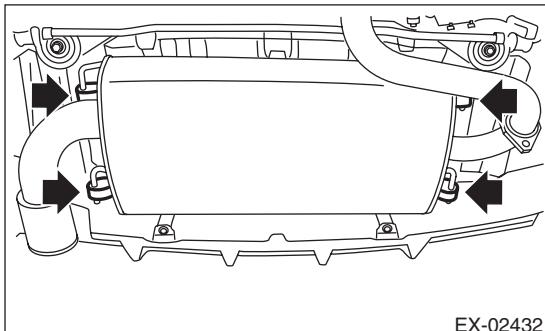

EX-02432

B: INSTALLATION

Install in the reverse order of removal.


NOTE:

- Use a new gasket and self-locking nut.
- After assembling, degrease the lubricant which was applied to the cushion rubber while removing/installing.

Tightening torque:


48 N·m (4.9 kgf·m, 35.4 ft-lb)

- 4 DOOR MODEL

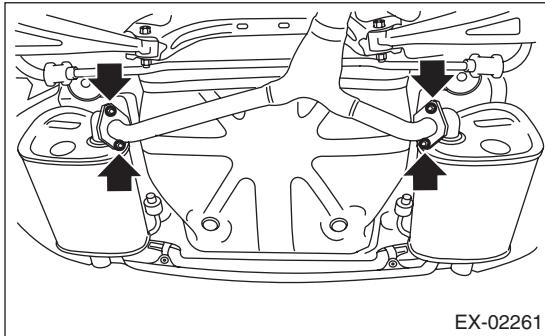

EX-02261

- 5 DOOR MODEL

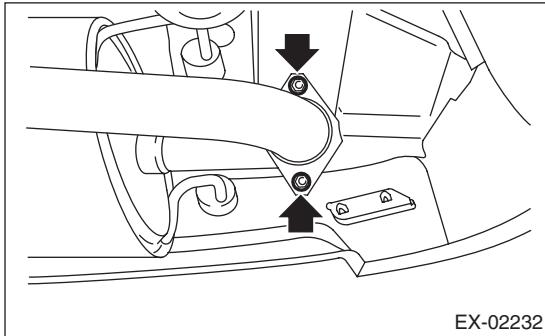

EX-02232

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.

COOLING

CO(H4DOTC)

	Page
1. General Description	2
2. Radiator Fan System	8
3. Engine Coolant	14
4. Water Pump	16
5. Thermostat	18
6. Radiator	20
7. Radiator Cap	23
8. Radiator Main Fan and Fan Motor	24
9. Radiator Sub Fan and Fan Motor	26
10. Reservoir Tank	28
11. Coolant Filler Tank	29
12. Engine Cooling System Trouble in General	30