

## **13.Tumble Generator Valve Actuator**

### **A: SPECIFICATION**

The tumble generator valve assembly cannot be disassembled.

Refer to "Tumble Generator Valve Assembly" for removal and installation procedures. <Ref. to FU(H4DOTC)-43, REMOVAL, Tumble Generator Valve Assembly.> <Ref. to FU(H4DOTC)-43, INSTALLATION, Tumble Generator Valve Assembly.>