


Main Relay

FUEL INJECTION (FUEL SYSTEMS)


19. Main Relay

A: REMOVAL

- 1) Disconnect the ground cable from battery.

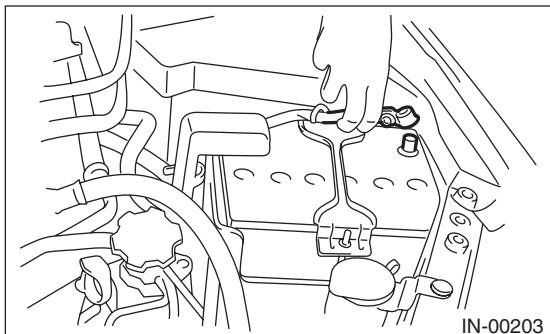

- 2) Remove the main relay from the relay block on the back side of the glove box.

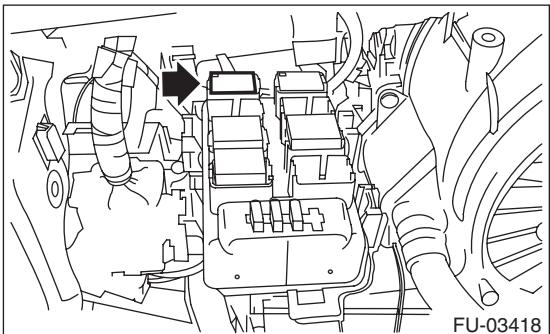


B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Measure the resistance between main relay terminals.

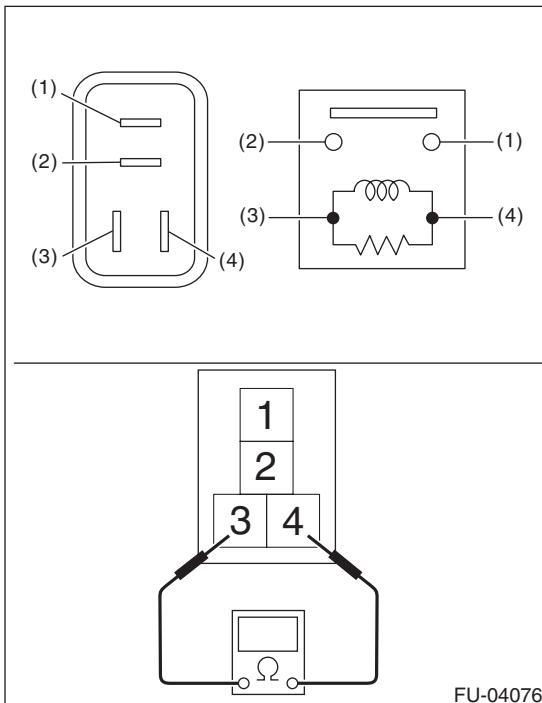


Terminal No.	Standard
1 and 2	1 MΩ or more
3 and 4	130.4 — 230.8 Ω (When 20°C (68°F))

Main Relay

FUEL INJECTION (FUEL SYSTEMS)

- 2) Connect terminal No. 3 to the battery positive terminal and the No. 4 terminal to the battery ground terminal, and measure the resistance between the main relay terminals.

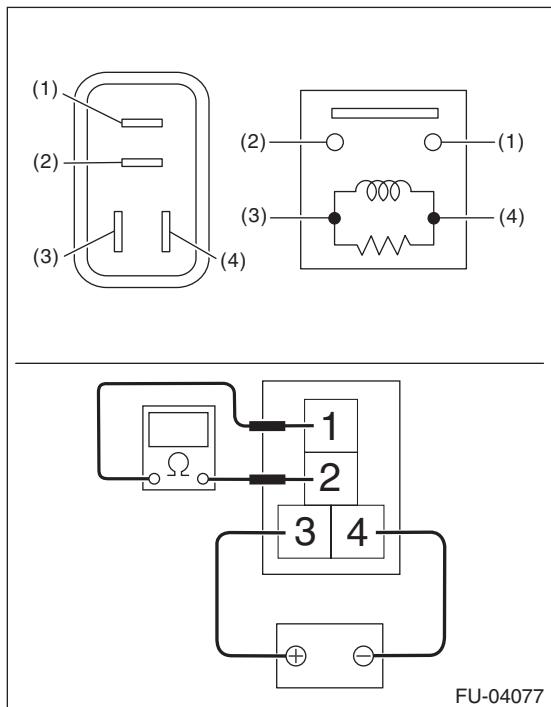

Terminal No.	Standard
1 and 2	Less than 1 Ω