


# Electronic Throttle Control Relay

FUEL INJECTION (FUEL SYSTEMS)

## 21. Electronic Throttle Control Relay

### A: REMOVAL

- 1) Disconnect the ground cable from battery.

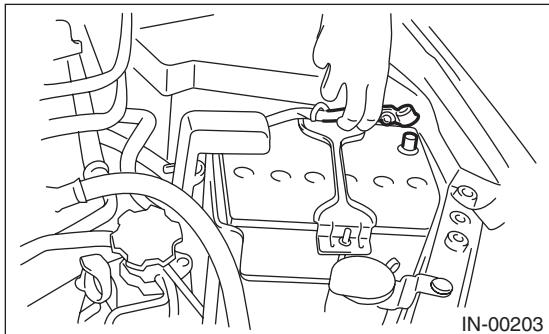

- 2) Remove the electronic throttle control relay from the relay block on the back side of the glove box.




### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

- 1) Measure the resistance between electronic throttle control relay terminals.

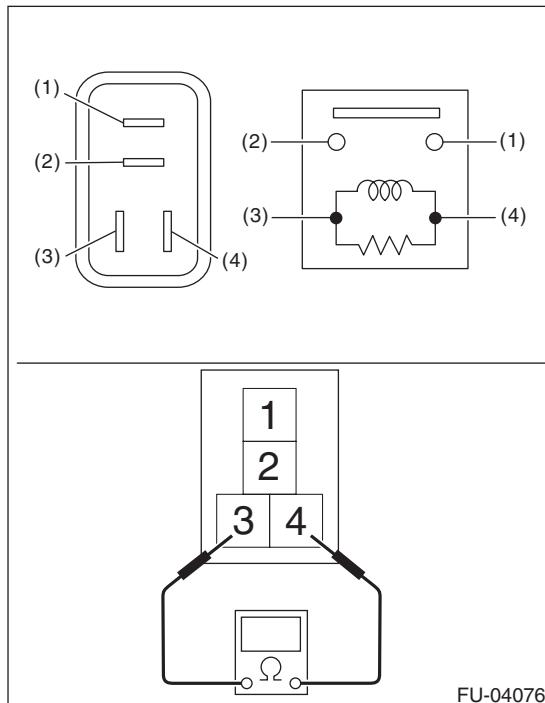


Terminal No.	Standard
1 and 2	1 MΩ or more
3 and 4	93.8 — 136.4 Ω (When 20°C (68°F))

## Electronic Throttle Control Relay

FUEL INJECTION (FUEL SYSTEMS)

2) Connect terminal No. 3 to the battery positive terminal and the No. 4 terminal to the battery ground terminal, and measure the resistance between the electronic throttle control relay terminals.

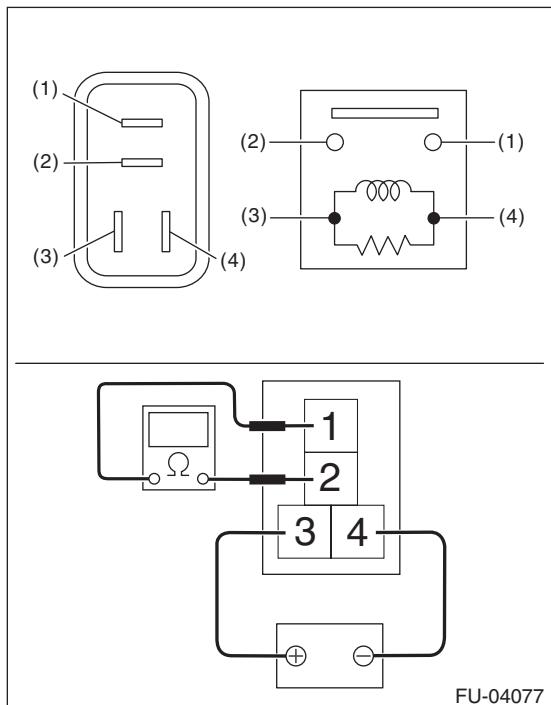

Terminal No.	Standard
1 and 2	Less than 1 $\Omega$