


## 22. Fuel Pump Control Unit


### A: REMOVAL

- 1) Disconnect the ground cable from battery.

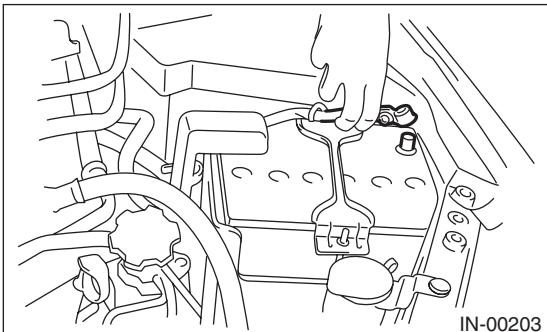


- 2) Remove the right side trunk side trim.(4 door model) <Ref. to EI-61, REMOVAL, Trunk Room Trim.>
- 3) Remove the right side rear quarter trim.(5 door model) <Ref. to EI-58, REMOVAL, Rear Quarter Trim.>
- 4) Remove the fuel pump control unit.

- 4 door model

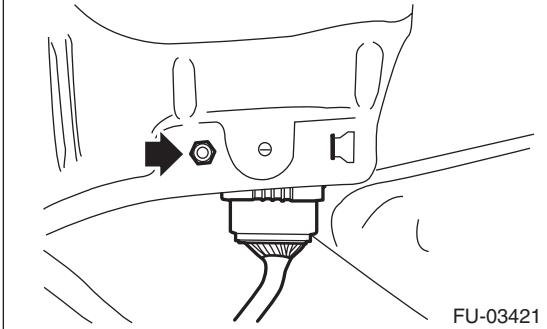

- 5 door model

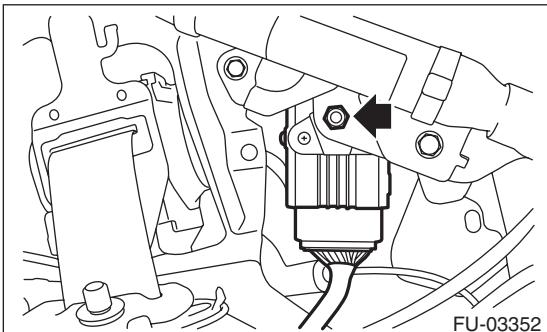

- 5) Disconnect the connector from fuel pump control unit.

### B: INSTALLATION

Install in the reverse order of removal.

**Tightening torque:**

5 N·m (0.5 kgf·m, 3.7 ft-lb)