

### 25. Fuel Filler Pipe

#### A: REMOVAL


**WARNING:**

Place "NO OPEN FLAMES" signs near the working area.


**CAUTION:**

Be careful not to spill fuel.

- 1) Set the vehicle on a lift.
- 2) Release the fuel pressure. <Ref. to FU(H4DOTC)-59, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 3) Drain fuel. <Ref. to FU(H4DOTC)-59, DRAINING FUEL (WITH SUBARU SELECT MONITOR), PROCEDURE, Fuel.>
- 4) Disconnect the ground cable from battery.


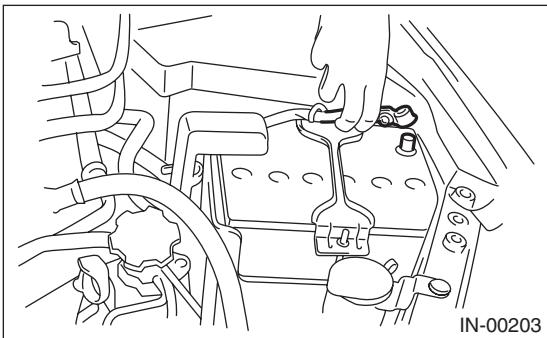


- 5) Open the fuel filler lid, and remove the filler cap.
- 6) Remove the screws which secure gasket.


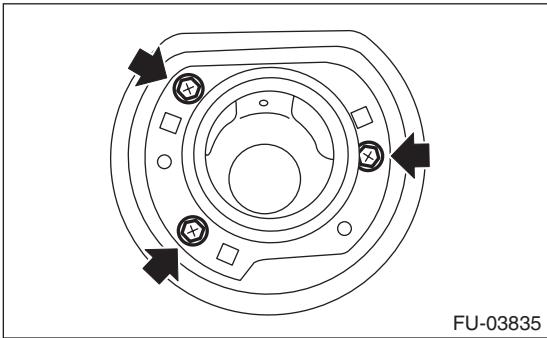


- 7) Remove the rear wheel RH.
- 8) Lift up the vehicle.
- 9) Remove the rear mud guard RH. <Ref. to EI-28, REMOVAL, Mud Guard.>
- 10) Remove the rear sub frame. <Ref. to RS-17, REMOVAL, Rear Sub Frame.>

- 11) Remove the bolts and nuts which hold fuel filler pipe on the body.

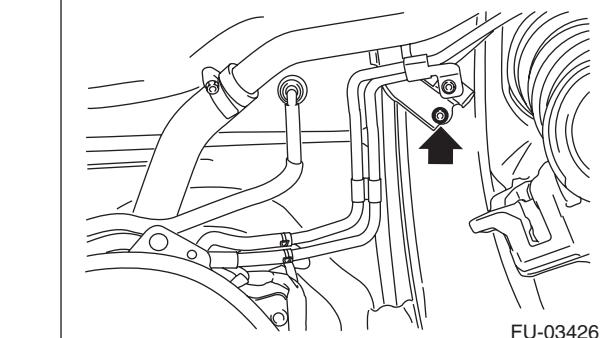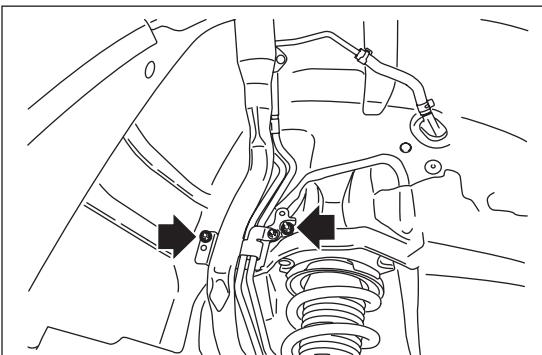

- 12) Disconnect the fuel filler hose (A) and evaporation hose (B).

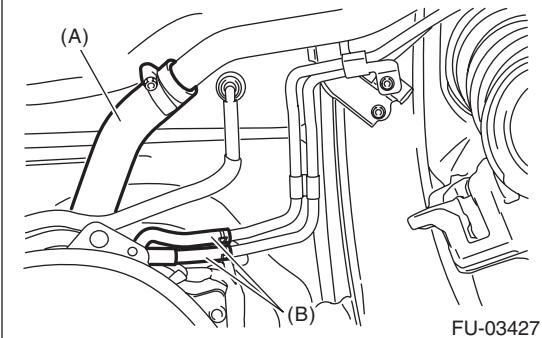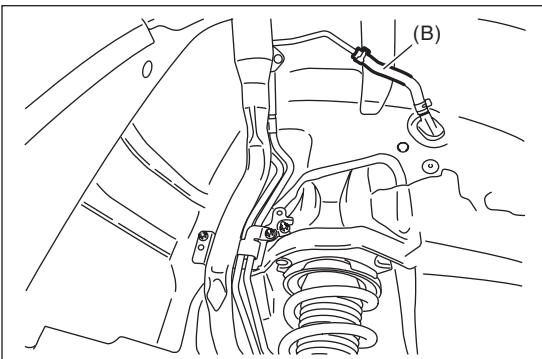


- 13) Remove the fuel filler pipe to the underside of the vehicle.

### B: INSTALLATION

- 1) Open the fuel filler lid.
- 2) Set the fuel saucer (A) with rubber gasket (C), and insert the fuel filler pipe into hole from the inner side of apron.
- 3) Align the holes in fuel filler pipe neck and set the cup (B), and tighten the screws.

**NOTE:**



If the edges of rubber gasket are folded toward inside, straighten it with a flat tip screwdriver.

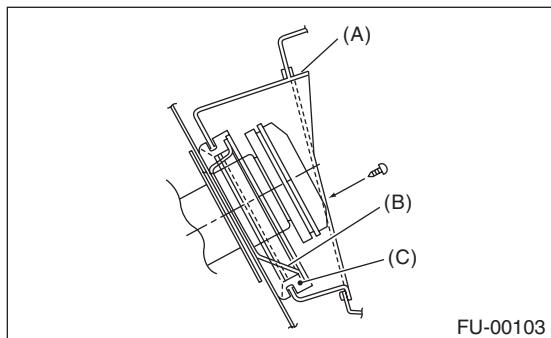

- 4) Securely insert the fuel filler hose (A) and evaporation hose (B) into the specified position, then attach the clamp or clip as shown in the figure.

**Tightening torque:**

**2.5 N·m (0.3 kgf·m, 1.8 ft-lb)**

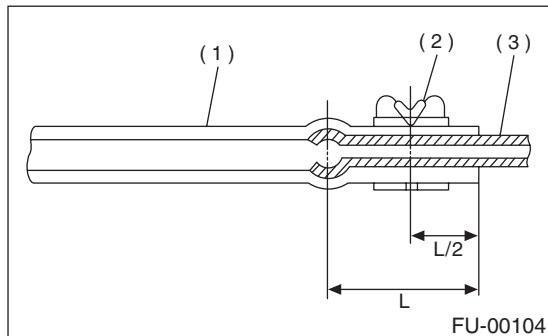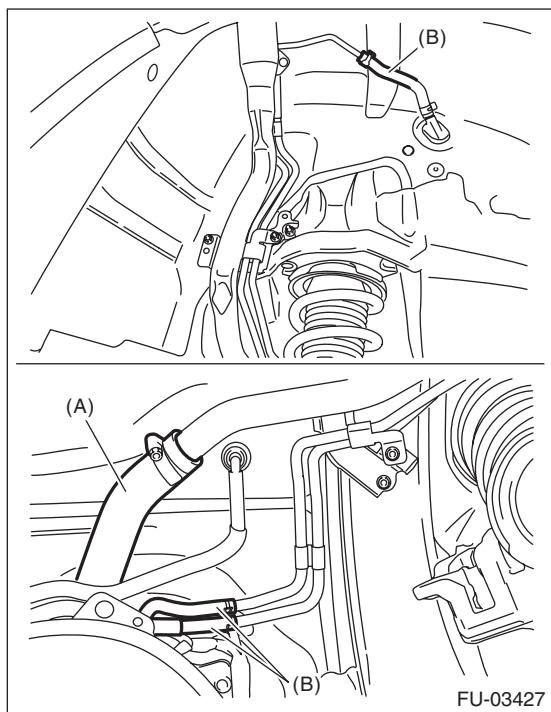

(1) Hose


(2) Clamp or clip

(3) Pipe

- 5) Install the fuel filler pipe to the body.

**Tightening torque:**

**7.5 N·m (0.8 kgf·m, 5.5 ft-lb)**

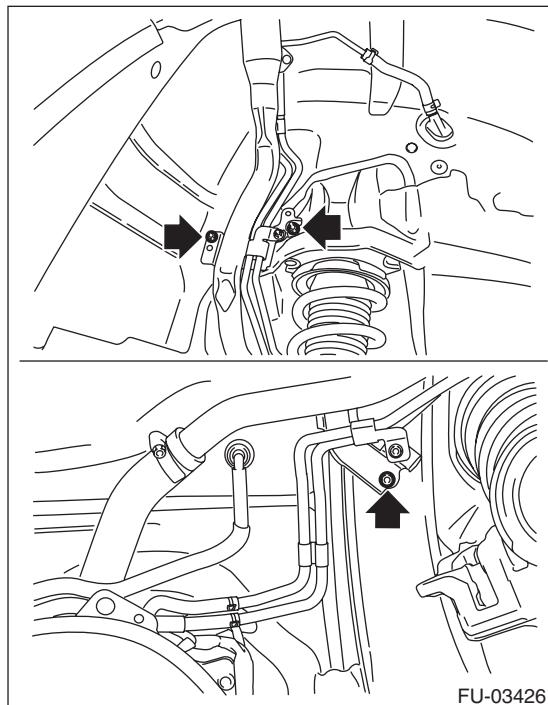

- 6) Install the rear sub frame. <Ref. to RS-18, INSTALLATION, Rear Sub Frame.>

- 7) Install the rear mud guard RH. <Ref. to EI-28, INSTALLATION, Mud Guard.>

- 8) Lower the vehicle.

- 9) Install the rear wheel RH.


**Tightening torque:**

**100 N·m (10.2 kgf·m, 73.8 ft-lb)**

# Fuel Filler Pipe

## FUEL INJECTION (FUEL SYSTEMS)


10) Connect the ground cable to battery.

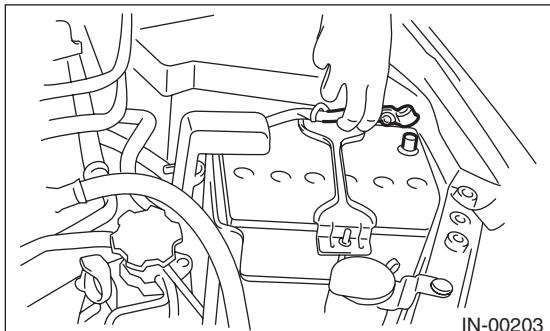

11) Inspect the wheel alignment and adjust if necessary.

## C: DISASSEMBLY


- 1) Remove the shut valve from the fuel filler pipe.   
<Ref. to EC(H4DOTC)-21, REMOVAL, Shut Valve.>
- 2) Remove the evaporation pipe from the fuel filler pipe.

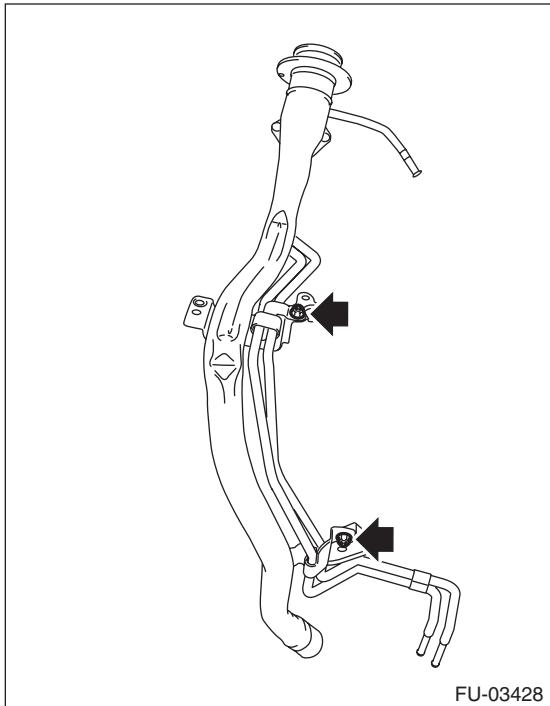

## D: ASSEMBLY

- 1) Install the evaporation pipe to the fuel filler pipe.

**Tightening torque:**  
7.5 N·m (0.8 kgf-m, 5.5 ft-lb)

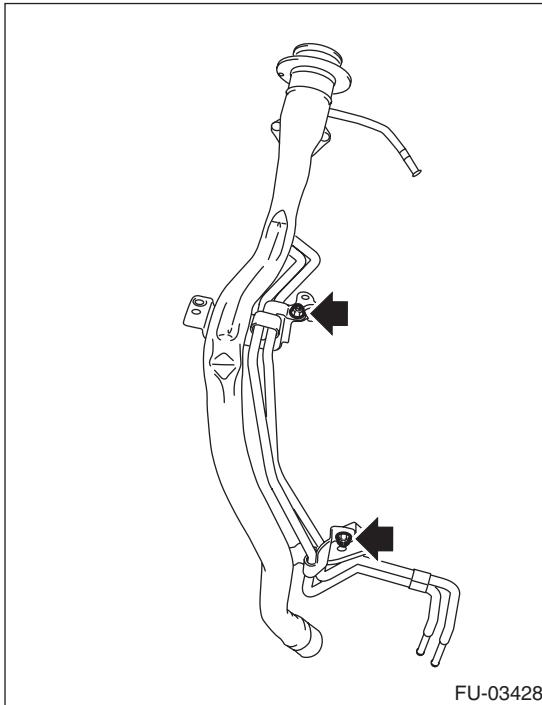

- 2) Install the shut valve to the fuel filler pipe. <Ref. to EC(H4DOTC)-21, INSTALLATION, Shut Valve.>

## E: INSPECTION

- 1) Check that the fuel filler pipe does not have holes, cracks or is damaged in any other way.
- 2) Make sure that the fuel hose is not cracked and that the connections are tight.