

## 30. Fuel Damper

### A: REMOVAL

**WARNING:**


Place "NO OPEN FLAMES" signs near the working area.

**CAUTION:**

- Be careful not to spill fuel.
- Catch the fuel from hoses using a container or cloth.

1) Release the fuel pressure. <Ref. to FU(H4DOTC)-59, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>

2) Remove the fuel damper from fuel delivery hose (A) and fuel return hose (B).

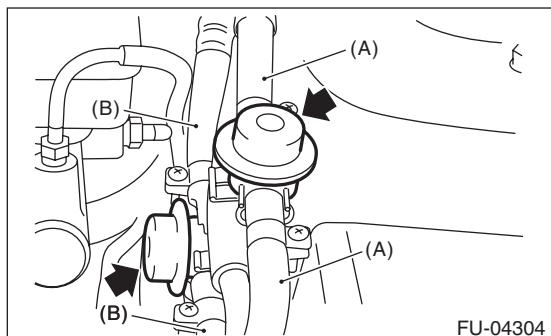

### B: INSTALLATION

**CAUTION:**

If fuel hoses or clamps are damaged, replace them with new parts.

Install in the reverse order of removal.

**Tightening torque:**

1.25 N·m (0.1 kgf·m, 0.9 ft-lb)

### C: INSPECTION

Check that the fuel hose and fuel damper does not have deformation, cracks and damage.