


31. Purge Damper

A: REMOVAL


WARNING:

Place "NO OPEN FLAMES" signs near the working area.

- 1) Remove the purge damper from the purge damper stay.

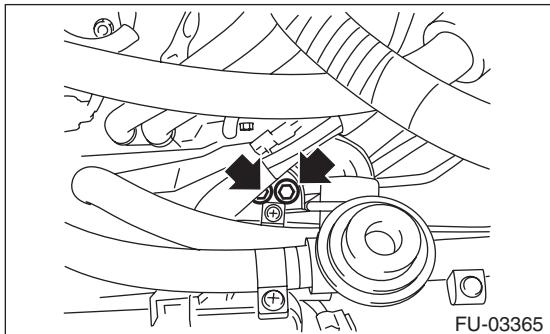

- 2) Disconnect the evaporation hose from the purge damper and remove the purge damper.

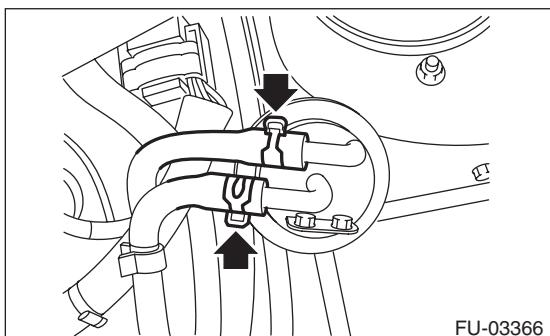

B: INSTALLATION


CAUTION:

If the evaporation hose is damaged, replace with a new hose.

Install in the reverse order of removal.

Tightening torque:

8 N·m (0.8 kgf·m, 5.9 ft-lb)

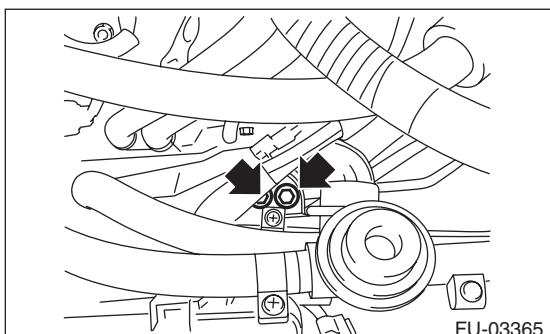

C: INSPECTION

Check that the evaporation hose and purge damper does not have deformation, cracks and damage.