

# General Description


## IGNITION

### 1. General Description

#### A: SPECIFICATION

| Item          |   | Specifications            |
|---------------|---|---------------------------|
| Ignition coil | Type  | FK0334                    |
|               | Ignition system                             | Independent ignition coil |
|               | Manufacturer                                | Diamond Electric          |
| Spark plug    | Manufacturer and type                       | NGK: SILFR6A              |
|               | Thread size (diameter, pitch, length)<br>mm | 14,1.25,26.5              |
|               | Spark plug gap<br>mm (in)                   | 0.7 — 0.8 (0.028 — 0.031) |
|               | Electrode                                   | Iridium                   |

#### B: COMPONENT

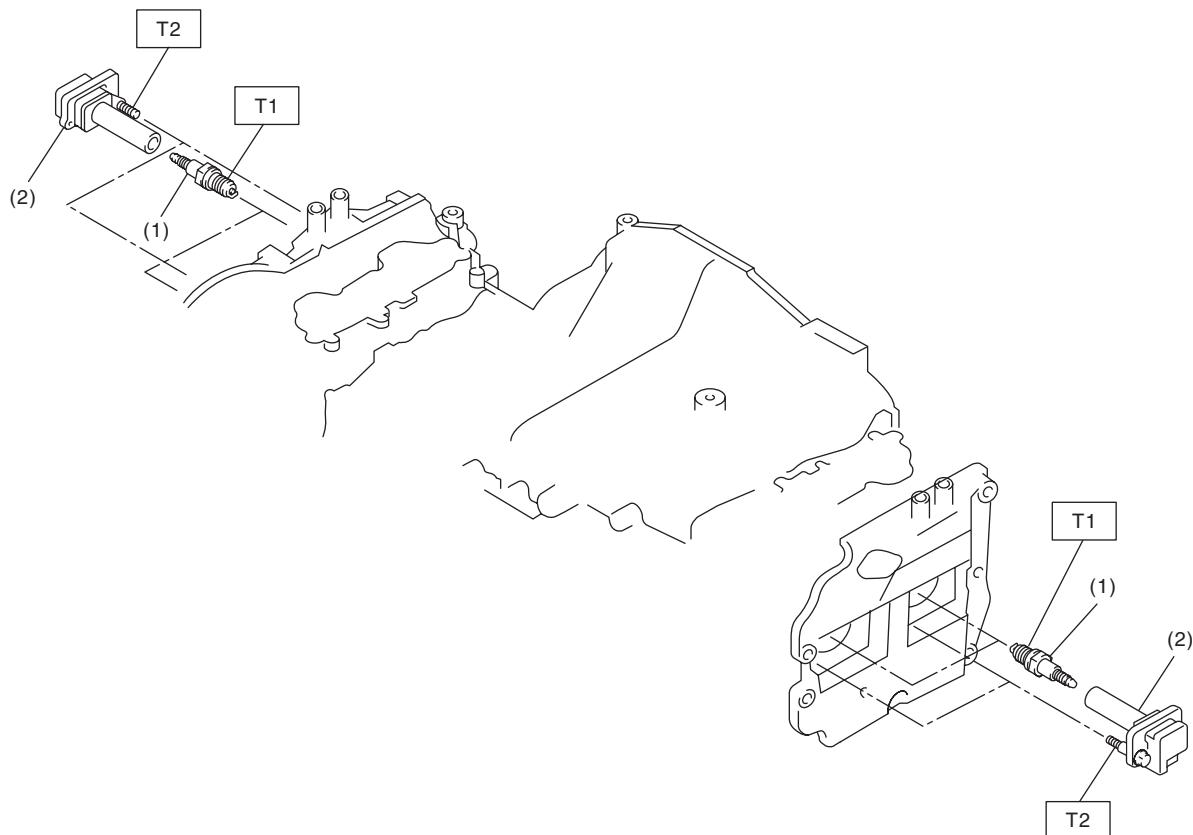

IG-02079

(1) Spark plug

(2) Ignition coil

**Tightening torque:N·m (kgf·m, ft·lb)**

**T1: 21 (2.1, 15.5)**

**T2: 16 (1.6, 11.8)**

## C: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before disconnecting connectors of sensors or units, be sure to disconnect the ground cable from the battery.