


INTAKE (INDUCTION)


2. Air Cleaner Element

A: REMOVAL


- 1) Disconnect the ground cable from battery.

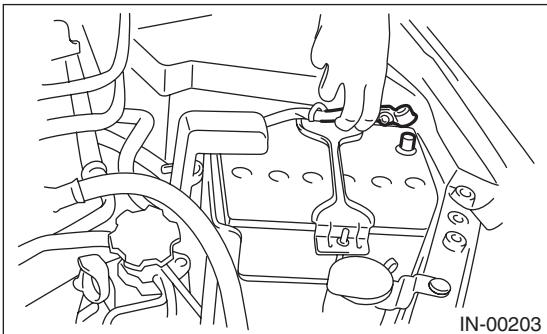

- 2) Remove the air intake duct. <Ref. to IN(H4DOTC)-11, REMOVAL, Air Intake Duct.>
- 3) Disconnect the connector from air flow and intake air temperature sensor.
- 4) Remove the clip (B) from the air cleaner case (front).

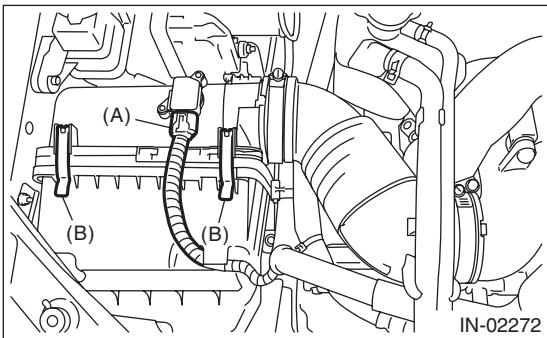

- 5) Open the air cleaner case, and remove the air cleaner element.

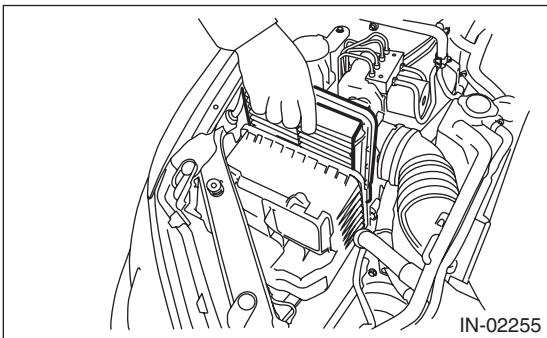

B: INSTALLATION

Install in the reverse order of removal.

CAUTION:

Be sure to use SUBARU genuine air cleaner element depending on the engine type when replacing the air cleaner elements. Otherwise engine performance may be damaged.

NOTE:

Check that there are no foreign objects in the air cleaner case.

C: INSPECTION

Replace if excessively damaged or dirty.