



## 5. Intake Duct

### A: REMOVAL

- 1) Disconnect the ground cable from battery.

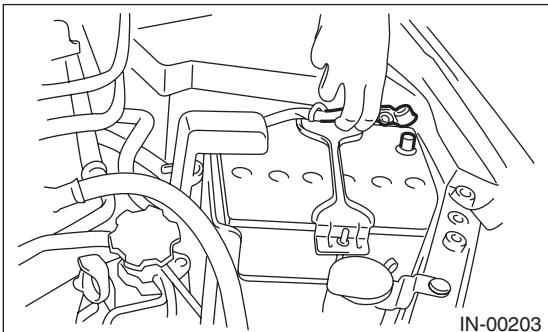

- 2) Remove the intake manifold. <Ref. to FU(H4DOTC)-16, REMOVAL, Intake Manifold.>
- 3) Remove the sensor, engine harness and fuel pipe attached to the intake manifold. <Ref. to FU(H4DOTC)-24, DISASSEMBLY, Intake Manifold.>
- 4) Remove the intake duct from intake manifold.

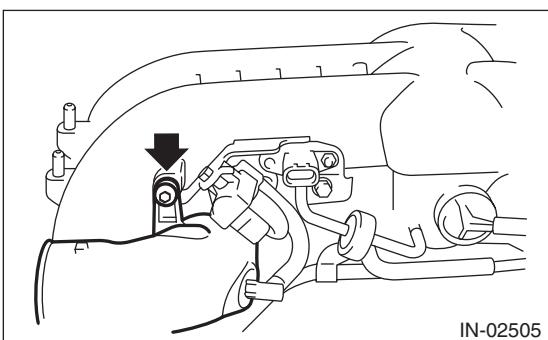

### B: INSTALLATION

Install in the reverse order of removal.

***Tightening torque:***

**17 N·m (1.7 kgf·m, 12.5 ft-lb)**

