


8. Air By-pass Valve

A: REMOVAL

- 1) Disconnect the air by-pass pipe (B) and vacuum hose (C) from the air by-pass valve (A).
- 2) Remove the air by-pass valve (A) from the inter-cooler.

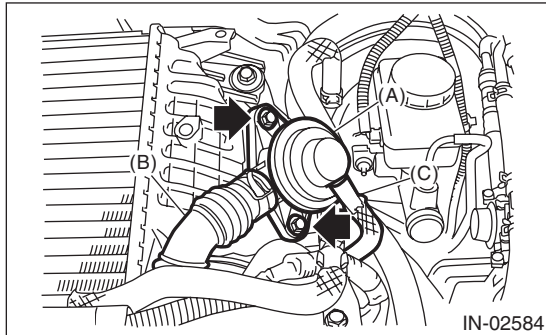

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

- Use new O-rings.
- Be careful not to pinch the O-ring.

Tightening torque:

6.5 N·m (0.7 kgf-m, 4.8 ft-lb)

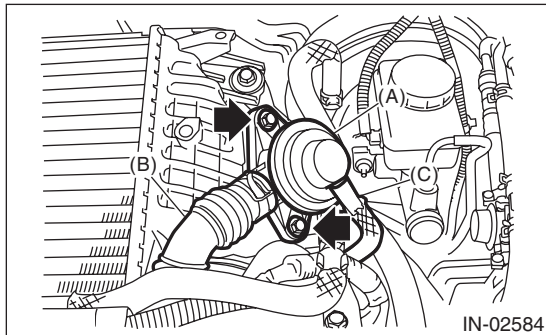

- (A) Air by-pass valve
- (B) Air by-pass pipe
- (C) Vacuum hose

Air By-pass Valve

INTAKE (INDUCTION)

MECHANICAL

ME(H4DOTC)

	Page
1. General Description	2
2. Compression	21
3. Idle Speed	22
4. Ignition Timing	23
5. Intake Manifold Vacuum	24
6. Engine Oil Pressure	25
7. Fuel Pressure	26
8. Valve Clearance	27
9. Engine Assembly	30
10. Engine Mounting	38
11. Preparation for Overhaul	39
12. V-belt	40
13. Crank Pulley	47
14. Timing Belt Cover	49
15. Timing Belt	50
16. Cam Sprocket	59
17. Crank Sprocket	60
18. Camshaft	61
19. Cylinder Head	67
20. Cylinder Block	75
21. Intake and Exhaust Valve	96
22. Piston	97
23. Connecting Rod	98
24. Crankshaft	99
25. Engine Trouble in General	100
26. Engine Noise	106