

21. Intake and Exhaust Valve

A: SPECIFICATION

Refer to "Cylinder Head" for removal and installation procedures of the intake and exhaust valves.

<Ref. to ME(H4DOTC)-67, REMOVAL, Cylinder Head.> <Ref. to ME(H4DOTC)-67, INSTALLATION, Cylinder Head.>