

## **22.Piston**

### **A: SPECIFICATION**

Refer to "Cylinder Block" for removal and installation procedures of pistons. <Ref. to ME(H4DOTC)-75, REMOVAL, Cylinder Block.> <Ref. to ME(H4DOTC)-79, INSTALLATION, Cylinder Block.>