

23. Connecting Rod

A: SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of connecting rod.

<Ref. to ME(H4DOTC)-75, REMOVAL, Cylinder Block. > <Ref. to ME(H4DOTC)-79, INSTALLATION, Cylinder Block. >