

## 24.Crankshaft

### A: SPECIFICATION

Refer to “Cylinder Block” for removal and installation procedures of the crankshaft. <Ref. to ME(H4DOTC)-75, REMOVAL, Cylinder Block.>  
<Ref. to ME(H4DOTC)-79, INSTALLATION, Cylinder Block.>