

## 3. Idle Speed

### A: INSPECTION

- 1) Before checking the idle speed, check the following item:
  - (1) Check the air cleaner element is free from clogging, ignition timing is correct, spark plugs are in good condition, and hoses are connected properly.
  - (2) Check the malfunction indicator light does not illuminate.
- 2) Warm up the engine.
- 3) Read the engine idle speed using Subaru Select Monitor. <Ref. to EN(H4DOTC)(diag)-37, READ CURRENT DATA FOR ENGINE (NORMAL MODE), OPERATION, Subaru Select Monitor.>?
- 4) Check the idle speed when no-loaded. (Headlight, heater fan, rear defroster, radiator fan, A/C and etc. are OFF)

***Idle speed (No load and at “P” or “N” position on AT model, or neutral position on MT model):***

***700±100 rpm***

- 5) Check the idle speed when loaded. (Turn the A/C switch to “ON” and operate the compressor for at least one minute before measurement.)

***Idle speed (A/C ON and at “P” or “N” position on AT model, or neutral position on MT model):***

***825±100 rpm (AT model)***

***800±100 rpm (MT model)***

**NOTE:**

Idle speed cannot be adjusted manually, because the idle speed is automatically adjusted. If the prescribed idle speed cannot be maintained, refer to the General Diagnosis Table under “Engine Control System”. <Ref. to EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.>