


### 24. Tire Rotation

#### A: INSPECTION

1) When the tread has worn down to less than 1.6 mm (0.063 in) or the wear indicator appears across the tread, replace the tire. (Replace the right and left tire as a set.)

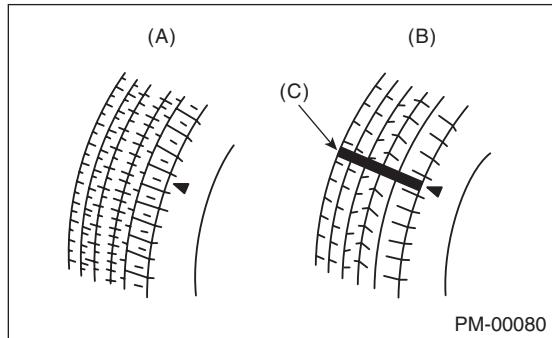


(A) New tread  
(B) Damaged tread  
(C) Tread wear indicator

2) If the tire appears to be worn unevenly, adjust the wheel alignment.


3) Next, make a tire rotation between front and rear as shown in the figure, make sure tires are worn evenly.

- When the direction of tire rotation is not specified

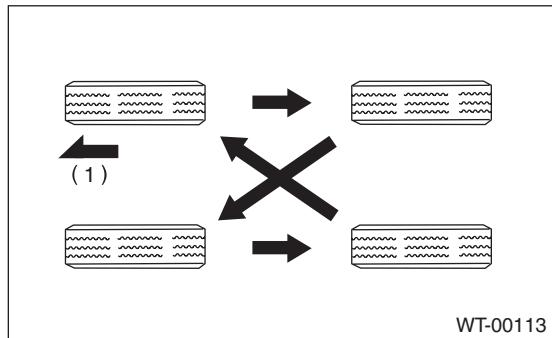


(1) Front

- When the direction of tire rotation is specified

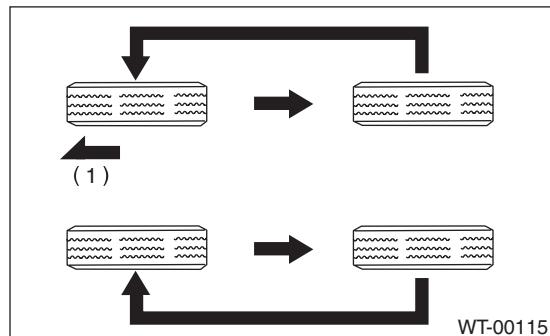

(1) Front

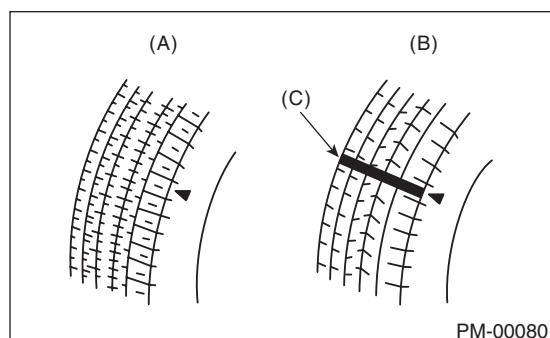

(A) New tread  
(B) Damaged tread  
(C) Tread wear indicator