


17. Control Valve Strainer

A: REMOVAL

- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from battery.
- 3) Lift up the vehicle.
- 4) Clean the transmission exterior.
- 5) Remove the drain plug (ATF) to drain ATF.

CAUTION:

Directly after the vehicle has been running or the engine has been long idle running, the ATF is hot. Be careful not to burn yourself.

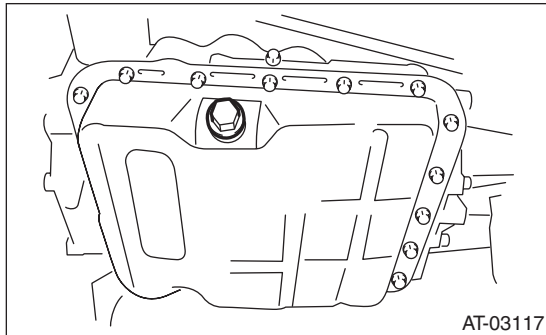

- 6) Perform replacement with a new gasket, and tighten the drain plug (ATF).


Tightening torque:

25 N·m (2.5 kgf-m, 18.4 ft-lb)

- 7) Remove the oil pan.


CAUTION:

Be careful not to allow foreign matter such as dust or dirt to enter the oil pan.

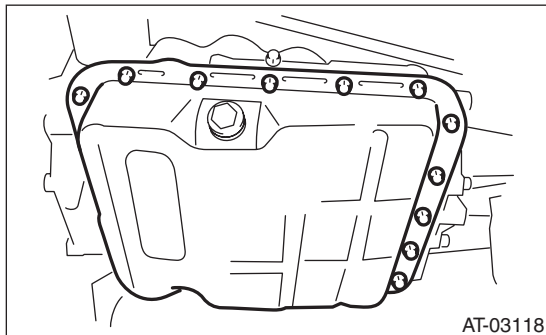

- 8) Remove the magnet.
- 9) Clean the magnet.
- 10) Completely remove the remaining liquid gasket on the transmission case and oil pan.

- 11) Remove the control valve strainer tightening bolt, and remove control valve strainer from the control valve body.

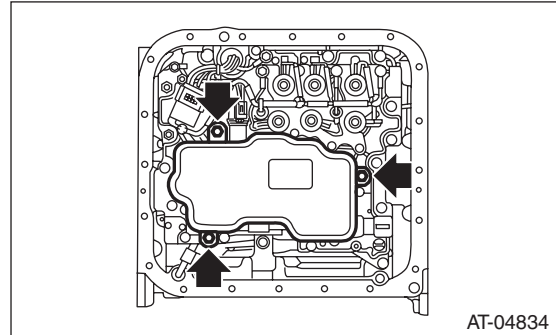

B: INSTALLATION

- 1) Check the control valve body for dust and other foreign matter.
- 2) Attach a new control valve strainer to the control valve body.

- (1) Apply ATF to the entire perimeter of the O-ring on the control valve strainer.

CAUTION:

When applying ATF, avoid adhesion of dust and foreign matter on the O-ring.

- (2) Install the control valve strainer to the control valve body from the O-ring side.


CAUTION:

If the control valve strainer is pushed in at an angle, the O-ring may be damaged. Be sure to push in the control valve strainer straight to install.


- (3) Tighten the three bolts.

Tightening torque:

10 N·m (1.0 kgf-m, 7.4 ft-lb)

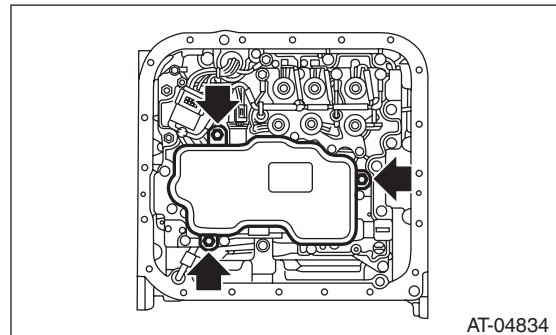


- 3) Attach the magnet at the specified position of the oil pan.

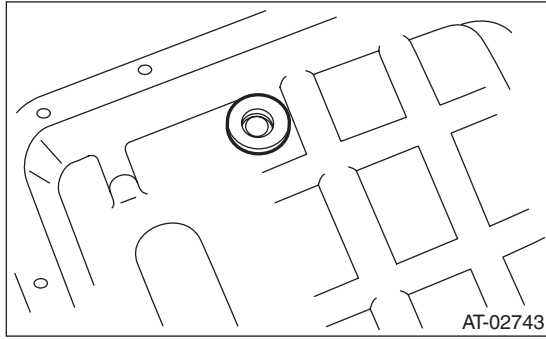

- 4) Apply proper amount of liquid gasket to the entire oil pan mating surface.

Liquid gasket:


**THREE BOND 1217B (Part No. K0877YA020)
or equivalent**

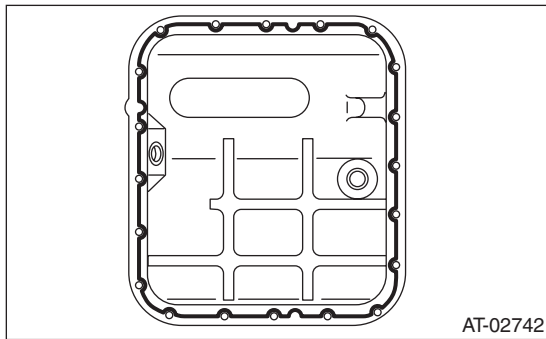

- 5) Fill the 3 holes aside from the bolt holes in the transmission case, with liquid gasket.

Liquid gasket:

**THREE BOND 1217B (Part No. K0877YA020)
or equivalent**

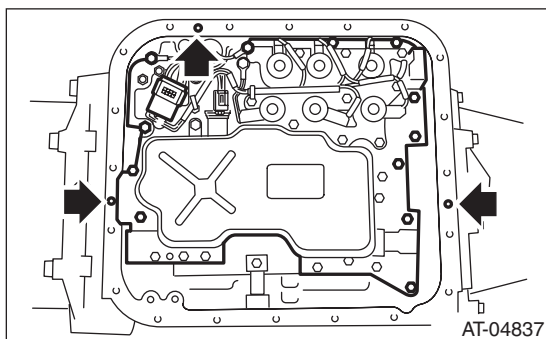

- 6) Install the oil pan by equally tightening the bolts.

Tightening torque:

5 N·m (0.5 kgf-m, 3.7 ft-lb)

- 7) Fill ATF from the oil charge pipe. <Ref. to 4AT-26, Automatic Transmission Fluid.>
8) Bleed the air of control valve. <Ref. to 4AT-59, PROCEDURE, Air Bleeding of Control Valve.>
9) Check the ATF level. <Ref. to 4AT-26, INSPECTION, Automatic Transmission Fluid.>

C: INSPECTION

Check the control valve strainer for holes, damages or adhesion of dust and other foreign particles.