


22. Air Breather Hose

A: REMOVAL


- 1) Remove the air intake chamber. (non-turbo model) <Ref. to IN(H4SO)-7, REMOVAL, Air Intake Chamber.>
- 2) Remove the intercooler. (Turbo model) <Ref. to IN(H4DOTC)-13, REMOVAL, Intercooler.>
- 3) Disconnect the air breather hose.

- Non-turbo model

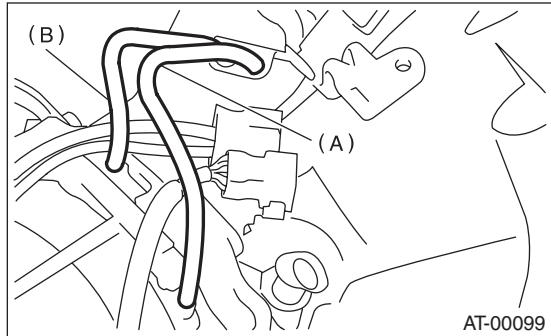

(A) Air breather hose (Transmission case)
(B) Air breather hose (Oil pump housing)

- Turbo model

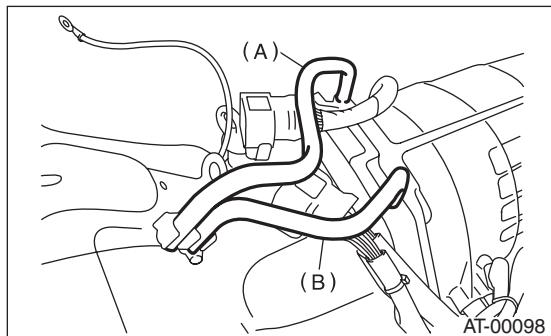


(A) Air breather hose (Transmission case)
(B) Air breather hose (Oil pump housing)

B: INSTALLATION


- 1) Install the air breather hose.

- Non-turbo model

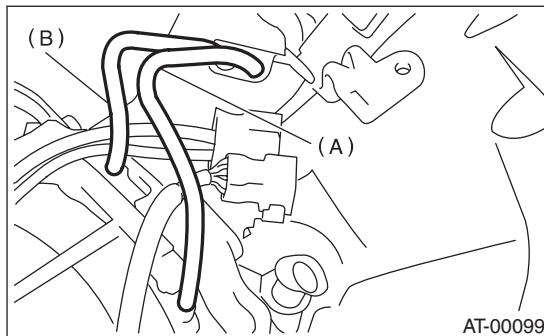

(A) Air breather hose (Transmission case)
(B) Air breather hose (Oil pump housing)

- Turbo model

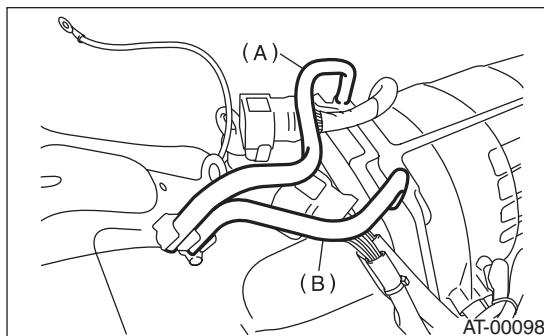

(A) Air breather hose (Transmission case)
(B) Air breather hose (Oil pump housing)

- 2) Install the air intake chamber. (non-turbo model) <Ref. to IN(H4SO)-7, INSTALLATION, Air Intake Chamber.>

- 3) Install the intercooler. (Turbo model)

<Ref. to IN(H4DOTC)-13, INSTALLATION, Intercooler.>

C: INSPECTION

Make sure the hose is not cracked or clogged.